

FIREFLY  
INTEGRATIONS



VEGATOUGH

Coach House V4 Manual

 *Coach House*<sup>®</sup>



**Imagination ~ Innovation ~ Integration**

1013 Elroy Drive, Middlebury, Indiana 46540 (574) 825-4600

## Coach House V4 Manual

The information contained in this manual is a general overview of the Firefly system and is subject to change at any time.

2	Table of Contents
3	Lyra Screen Navigation
4	Home
6	Lights
7	Auto Gen Start Settings (AGS)
8	Climate Control
9	Settings
10	Settings/Mobile App
11	Settings/Network Diagnostics
13	Overcurrent Detection
14	Settings/Switch Panel Info
15	Floorplan Selection and Options
16	Wireless Switch Pairing
17	Service Mode
18	Vegatouch Eclipse Setup
26	SSP17 Switch Panels
27	G12 DC Panels
28	Networking
29	Network Status Indicators
30	Mira NET LED Status Key
31	System Diagrams





# Lyra Screen Navigation

Tap any icon from the navigation bar to select the desired page. The currently selected page will always be listed in the top corner of the screen.



Navigation Menu




# Home

1

The Light Master controls all interior lights at once. When Light Master Off is pressed, it will remember which lights were on. Then, when Light Master On is pressed, it will only turn on the lights that are in memory. To turn on all lights again, press and hold Light Master On for at least one second.

\*Troubleshooting – Memory is rewritten each time Light Master Off is pressed. In the case that it is pressed twice in a row, it will remember that no lights were on and just touching Light Master On won't turn on any lights. Press and hold Light Master On to turn the lights back on.

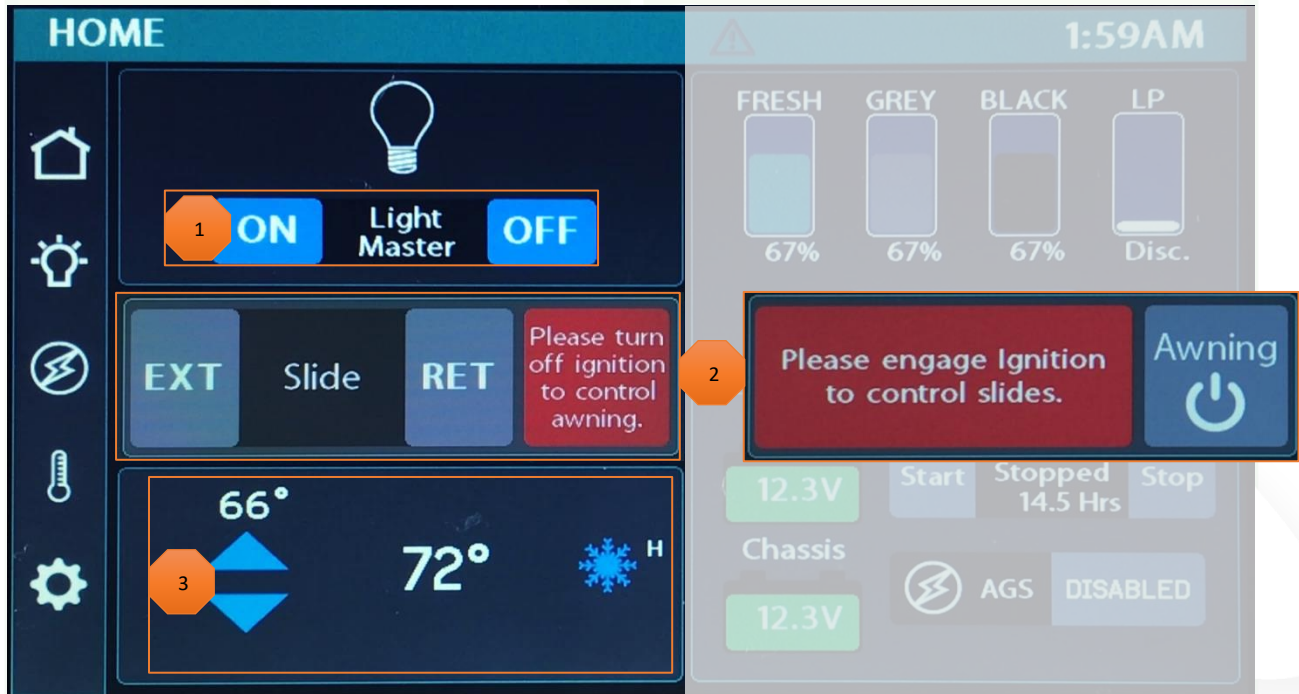

2

Slide/Awning – This section of the screen will toggle between the Slide control or Awning control based on the Parking Brake/Ignition inputs currently being received by the G12 panel.

Slide – Press and Hold EXT or RET to operate the Slide.

Awning – Tap the Awning button to fully extend or retract the awning.

3

Climate Control – Tap the arrows to select your desired temperature. The current temperature and climate control mode will display on the home screen. A white fan graphic will represent Fan mode, a blue snowflake will represent Air Conditioning, a red flame graphic will represent the Furnace. Auto mode will display the graphic for the system that is currently running.



These graphics represent the percentage filled for holding tanks.


The LP Tank readings are as follows:

Disconnected – above 97%. Percentage changes to Disc and tank shows empty.

Full – 75% to 97%. Percentage changes to Full and tank shows accurate level.

Actual Level – Displays actual percentage and level 25 – 97%.

Low – 25%. Percent changes to Low and tank shows accurate level.

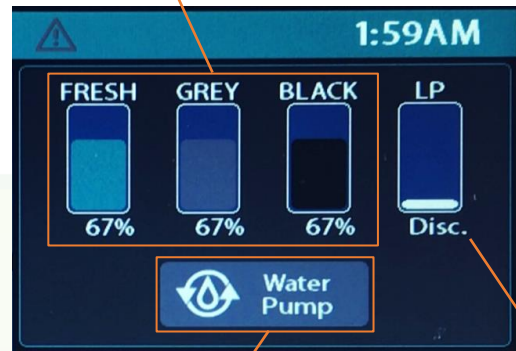

Water Pump – Tap to toggle On/Off.

LP percentage remaining (shown disconnected).

Button status – buttons will turn light blue when on and gray when off.

4

Battery Level Indicators - These graphics will indicate the battery voltage for the House and Chassis batteries. The graphics will display Green while above 12V and Red while below 12V.



5


### Generator Controls

The Generator display will show the total number of generator hours accumulated as well as the current operating status (running or stopped). Generator hours are saved to the system, not to the generator itself. Press and Hold the Gen Hours Tally for 5 seconds to change the number of Gen Hours being displayed.

Gen Start – Tap Start to start the generator.

Gen Stop – Tap Stop to stop the generator.

Tap to Enable/Disable AGS (Action Required).

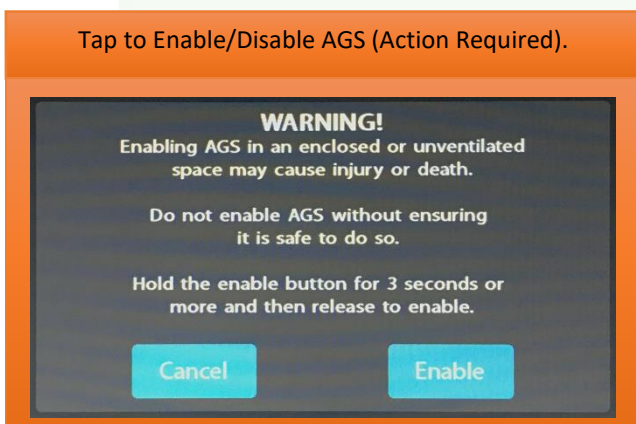



# Lights

This screen will control the lighting for the entire coach, including the exterior. Tap any button to turn the desired light On/Off.




Lights with up/down arrows are dimmable. Press and hold these buttons to ramp the brightness up or down. Tap the buttons to toggle On/Off.






## Auto Gen Start Settings

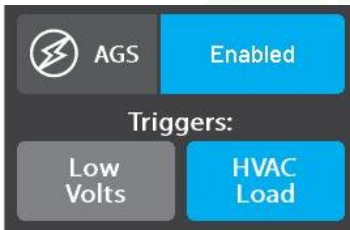

Tap to Enable/Disable AGS (as described on page 5).

Trigger Options – Automatically start the generator using specified voltage settings (Low Volts) or when A/C or Heat Pump starts (HVAC). Select one or both triggers. If no triggers are selected, AGS will not run. Disable HVAC Load while connected to shore power to keep the generator from starting.

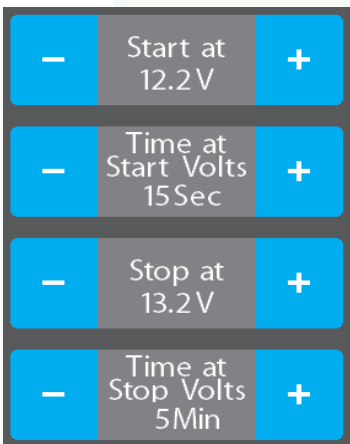

Start at Volts - The generator will start when the voltage drops to this set point depending on “Time a Volts” setting below. (Range 10.5v – 12.5v)

Time at Start Volts - The generator will start when the voltage drops to the Start at Voltage for this specific amount of time. (Range 5 seconds – 1 minute)

Stop at Volts - The generator will shut off when the voltage reaches this set point depending on “Time at Stop Volts” setting below. (Range 13.2v – 14.5v)

Time at Stop Volts - The amount of time required for the voltage to remain at “Stop at Volts” level before the generator shuts off. (Range 5min – 120 min)



Minimum Gen Run Time - Use the +/- buttons to set the minimum amount of time that your generator will run once it has started. (Range 10min – 30 min)

Maximum Gen Run Time - Use the +/- buttons to set the maximum amount of time that your generator will run once it has started. (Range 120min – 300min)

Gen Start Retries - Use the +/- buttons to set the number of tries that your generator will retry to start. (Range 1-5 retries)




Generator Hours Reset – Press and hold the accumulated hours tally for seven seconds to enter the hours reset screen. This process should only be done after replacing or servicing the generator or to sync the hours on the screen with the hour meter on the generator.



# Climate Control

Use the Arrows to select your desired temperature by zone.

Current Temperature/Mode/Fan speed.

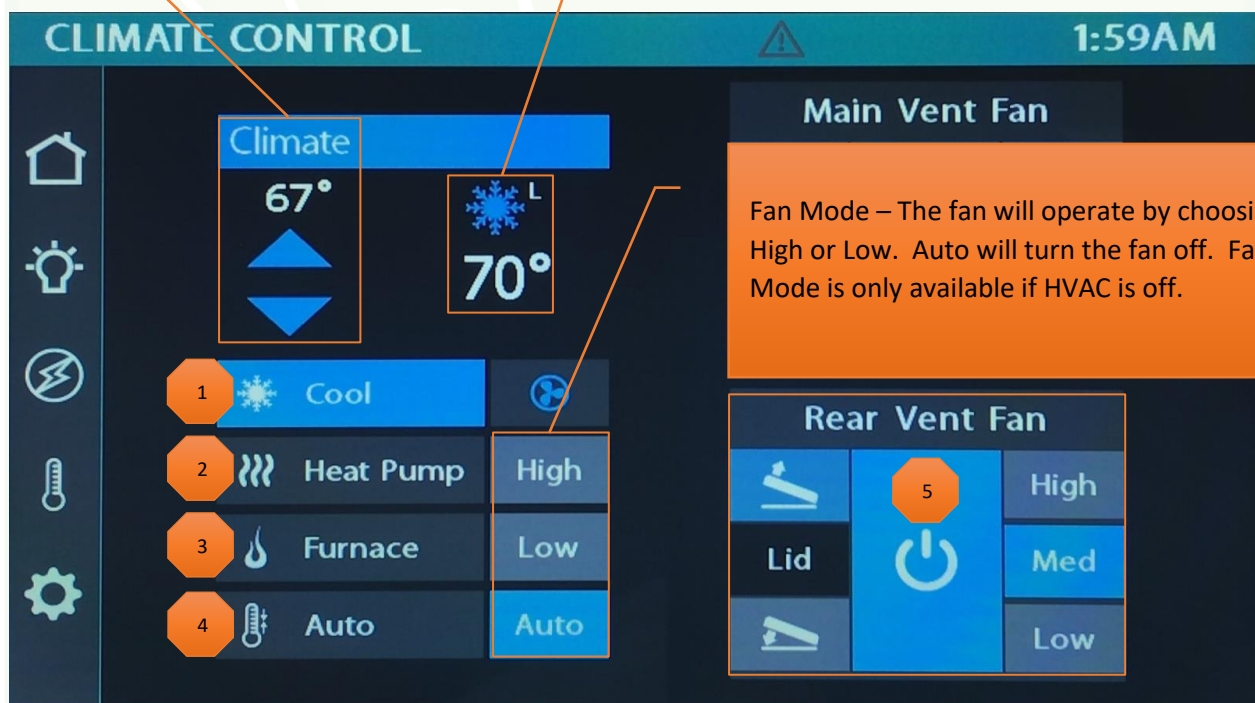


- 1 Cool – Tap to operate the air conditioning. The A/C will run until the current temp reaches your desired temp and then shut off.
- 2 Heat Pump – Tap to operate the Heat Pump. The Heat Pump will run until the current temp reaches your desired temp and then shut off.
- 3 Furnace – Tap to operate the furnace. The furnace will run until the current temp reaches your desired temp and then shut off.
- 4 Auto – Tap to put the system into Auto mode. The A/C or Heat Pump will automatically run to keep your desired temperature consistent. Furnace may be selected manually to be used in addition to the Heat Pump.
- 5 Vent Fan Controls – Tap Power to raise the lid and start the fan at medium speed. Tap a speed selection if you'd prefer it to run faster or slower. Tap Lid Down to power off the fan and close the lid. Tapping Lid Up will raise the lid but will not start the fan.





# Settings

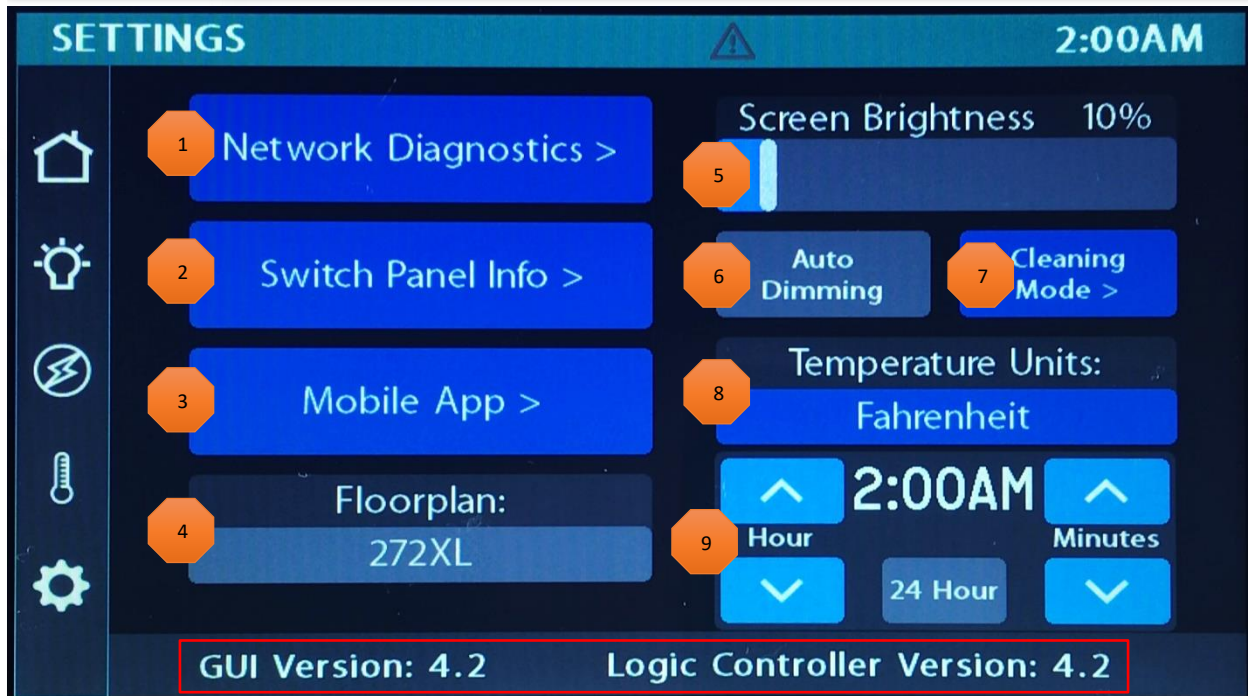


- 1 Tap to enter the Network Diagnostics page.
- 2 Navigate to the Switch Panel Info page.
- 3 Tap to enter the Vegatouch Eclipse connection screen.
- 4 Floorplan display.
- 5 Drag the slider to adjust Screen Brightness.
- 6 When Auto Dimming is enabled, the screen will enter sleep mode after 60 seconds of inactivity. Tap anywhere on the screen to wake it up. Please note that even if Auto Dimming has been disabled, the screen will still enter sleep mode after 4 hours of inactivity during daytime hours (5am – 10:59pm) and after 15 minutes of inactivity during night time hours (11pm-4:59am) as the result of a built in screen saver that cannot be disabled.
- 7 Clean Mode - Disables touchscreen functionality (15 seconds) for the purpose of cleaning.
- 8 Tap the temperature units display to switch between Fahrenheit and Celsius.
- 9 Tap the buttons to set the time or choose 24-hour time.

Please note the GUI and Logic Controller versions and have these numbers available before calling Tech Support.



## Settings/Mobile App

Vegatouch Eclipse is a wireless control module that easily connects to any Android or iOS device to give total control to many electrical, electronic and mechanical systems in your coach. Pair any device with the coach's built-in interface to monitor and control these systems.

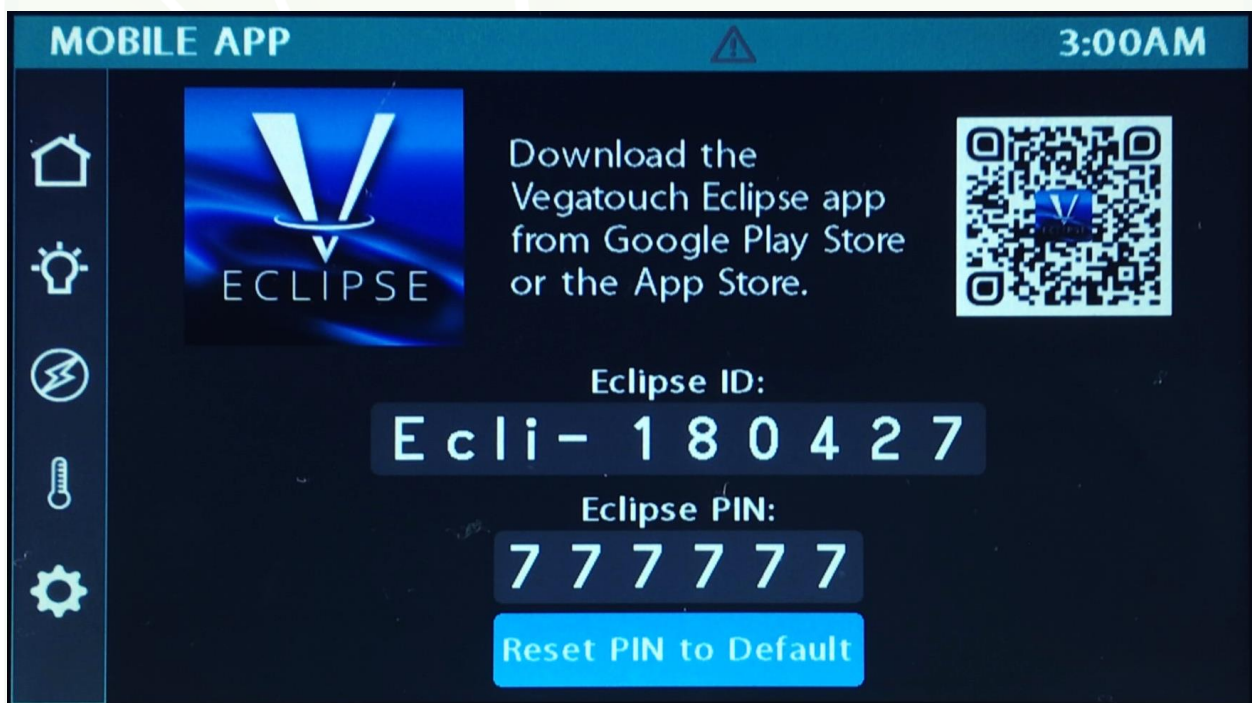



## Settings/Network Diagnostics

This screen will show the status of the Lyra screen and the G12 panel. It will also display any current faults the system is experiencing. Tap the tabs at the bottom of the screen to visit the different diagnostic pages.



A red triangle will appear whenever a fault condition exists. Tap it to navigate to the Network Diagnostics page for specific fault information.

**NETWORK DIAGNOSTICS** 2:00AM

**7IN COLOR LCD**

STATUS ●  
FIRMWARE VERSION 1.6  
CONFIG REVISION 4.2

**G12**

STATUS ●  
FIRMWARE VERSION 1.2  
CONFIG REVISION 4.2

GND IN1 - Park Brake ●  
12v IN6 - Ignition ●  
12v IN8 - Power Sense ●  
12v IN9 - Door Pin ●  
GEN Input ●

**FAULTS**

Main Vent Fan is offline.  
Rear Vent Fan is offline.  
No Signal From Wireless Switch 1  
No Signal From Wireless Switch 2  
No Signal From Wireless Switch 3

Current Faults

Green = Online

Devices / Faults | G12 Outputs | Aircons / Vent Fans



This screen will show which G12 Outputs are currently active.

NETWORK DIAGNOSTICS

2:00AM

Home

Light

Warning

Temp

Settings

G12 OUTPUTS

01 - F. Slide EXT/Sofa DWN	18 -	35 - D/S OVHD/Dine Rdng
02 - F. Slide RET/Sofa UP	19 - Generator START	36 -
03 - R. Slide EXT/Sofa FWD	20 - Generator STOP	37 -
04 - R. Slide RET/Sofa REV	21 - Slide/Sofa Ceiling Lts	38 -
05 - OVHD Cab Lts	22 - Slide/Sofa Reading Lts	39 -
06 - Shower Lts	23 - Awning Lts	40 -
07 - Water Pump	24 - Rt./F. Sld Reading Lts	41 -
08 - Slide Pump	25 - L/R Sld Reading Lts	42 -
09 -	26 - Front Ceiling Lts	43 -
10 -	27 - F./Accent Indr Lts	44 -
11 -	28 - R. Indr/Bath OVHD Lts	
12 -	29 - R Ceiling/Galley OVHD	
13 -	30 - Bath Ceiling Lts	
14 -	31 - Courtesy Lts	
15 -	32 - TV Cab Lts	
16 -	33 - Porch Lts	
17 -	34 - P/S OVHD/Dine Cab	

Devices / Faults

G12 Outputs

Aircons / Vent Fans

Active Output

This screen will show the current status of the Aircons and Vent Fan Controllers.

NETWORK DIAGNOSTICS

2:01AM

Home

Light

Warning

Temp

Settings

AIRCON 1

STATUS	
FW Version	6.11
Config Revision	1.2
HEAT PUMP	
COMPRESSOR	
FAN HIGH	
FAN LOW	
COIL TEMP STATUS	
COIL FREEZE ACTIVE	

REAR VENT FAN

STATUS	
FW Version	--.--
Config Revision	1.--
LID OPENING	
LID CLOSING	
FAN HIGH	
FAN MED	
FAN LOW	

MAIN VENT FAN

STATUS	
FW Version	--.--
Config Revision	1.--
LID OPENING	
LID CLOSING	
FAN HIGH	
FAN MED	
FAN LOW	

Main Vent Fan Controllers Disconnected.

Devices / Faults

G12 Outputs

Aircons / Vent Fans






# Overcurrent Detection



If an output on the G12 experiences an overcurrent fault, a lightning bolt graphic will appear at the top of the screen. Tapping the Lightning Bolt graphic will result in a Warning screen with a brief set of instructions. From this screen, tap Continue to navigate to the Diagnostics screen.

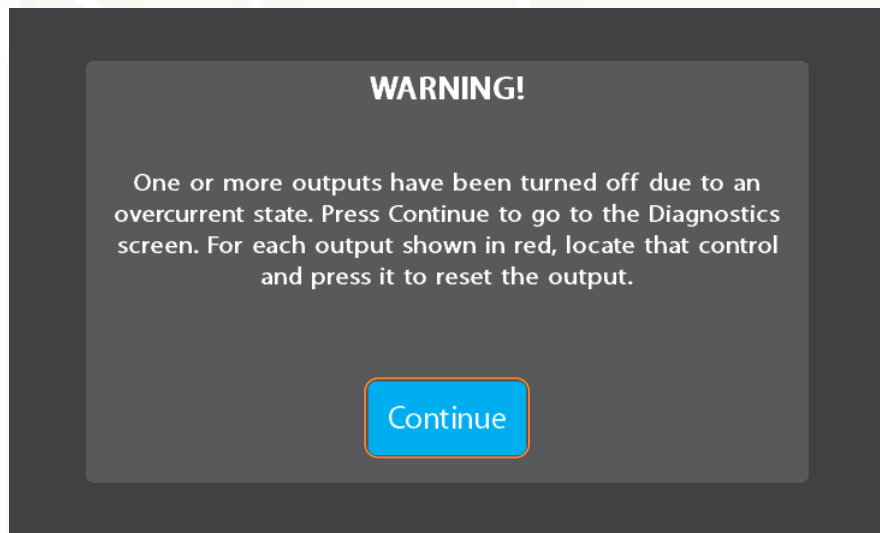

The Diagnostics screen will use red lights to alert you of overcurrent detections. To clear the faults, navigate to each faulted control and tap them to reset. Note – you'll notice that their buttons have turned red and will remain that way until cleared.






## Settings/Switch Panel Info

 
The color-coded Wireless Graphic and Signal Strength Value will identify the status of a wireless switch panel.






- Green – Over 100 (Strong)
- Yellow – 85-100 (Medium)
- Red – Less than 85 (Weak)





Red Wireless Graphic with a Zero reading – The switch is currently disconnected from the screen. It is likely that the battery inside your switch panel needs replaced. The wireless switch panel in your coach will illuminate a green LED whenever a button is pressed. If the LED on your switch panel does not illuminate when you press a button on your switch, you will need to replace the 2032 coin cell battery.


If the LED is illuminating but the switch still won't function, see the Wireless Switch Pairing section of this manual.


**WIRELESS SWITCHES**  **2:03AM**



 **1. Entry**  
**Strength: 155**


 **2. Rear**  
**Strength: 0**

 **3. Bath**  
**Strength: 0**

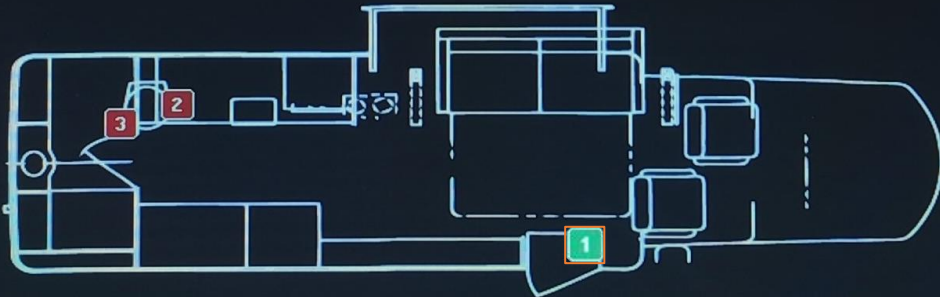

**SWITCH PAIRING**



- Green switch and wireless symbol shows that switch is connected to the screen.
- Red switch and wireless symbol shows that switch is not connected to the screen.
- New pairing may take up to 10 minutes to show green.
- Dead battery may take up to 30 minutes to show red.
- If red, check battery first. If battery works, pairing is needed.





## Floorplan Selection and Options

Press and hold the floorplan box for 7 seconds to enter the Floorplan/Options selection screen. From here, you'll be able to select the correct floorplan and any options that are specific to the coach. Tap Apply to save and exit.

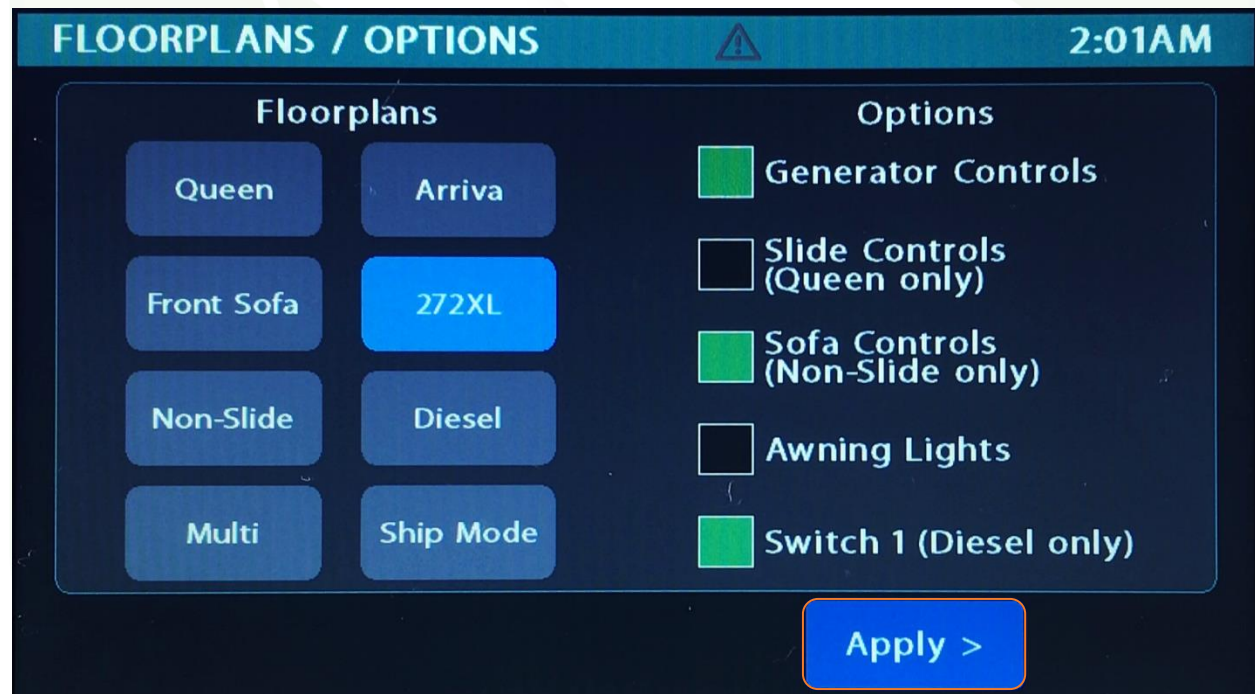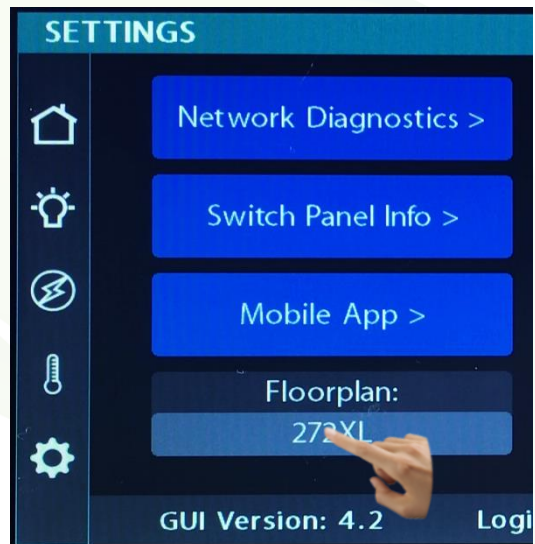



# Wireless Switch Pairing

Red switch indicator with a zero reading – The switch is currently disconnected from the screen. It is likely that the battery inside your switch panel needs replaced. The wireless switch panel in your coach will illuminate a green LED whenever a button is pressed. If the LED on your switch panel does not illuminate when you press a button on your switch, you will need to replace the 2032 coin cell battery.

If a new battery will not fix the issue, you might need to pair the switch panel to the screen.

- 1 Press and Hold a switch graphic for 3 seconds until the pairing screen appears.
- 2 Tap Start Pairing. You'll have 30 seconds to press and hold any 2 buttons on the switch panel at the same time for 5 seconds.
- 3 Tap Done once the pairing successful message appears. It may take up to 10 minutes for the battery switch indicator to turn Green, but the switch should work instantly once paired.

**WIRELESS SWITCHES** 2:03AM

1. Entry Strength: 0 2. Rear Strength: 0 3. Bath Strength: 0

**WIRELESS SWITCH PANEL PAIRING PROCEDURE**  
PAIRED WIRELESS ID: FFD8070B  
TO PAIR THE WIRELESS SWITCH PANEL INDICATED AT THE TOP OF THIS PAGE TO THE SCREEN, PRESS THE START PAIRING BUTTON AND INSTRUCTIONS WILL FOLLOW. TO KEEP CURRENT PAIRING, PRESS THE CANCEL BUTTON. TO CLEAR THE PAIRING, HOLD THE CLEAR BUTTON FOR 3 SECONDS.

**START PAIRING**

**WIRELESS SWITCH PANEL PAIRING PROCEDURE**  
PAIRING ACTIVE FOR: 19 SECONDS  
TO PAIR A WIRELESS SWITCH PANEL TO THE SCREEN INDICATED ABOVE, PRESS AND HOLD ANY TWO BUTTONS ON THE WIRELESS PANEL FOR 5 SECONDS.

**WIRELESS SWITCH PANEL PAIRING SUCCESSFUL**  
PAIRED WIRELESS ID: 0FD8070B

**DONE**






## Service Mode

This system features a Service Mode to be used by qualified technician. Once enabled, it will remove the 5-second hold delays on:

- Gen Hours Reset
- Individual Wireless Switch Pairing
- Clear All Wireless Switch Pairing
- Floorplan Selection

To enable Service Mode, Press and hold the Settings button for 5 seconds until a yellow wrench appears at the top right-hand corner of the screen (next to the time). Now, release your finger and the Warning screen will appear. Once you tap enable, the wrench will turn Red.

To disable Service mode, tap the red wrench, then tap Disable from the warning screen.

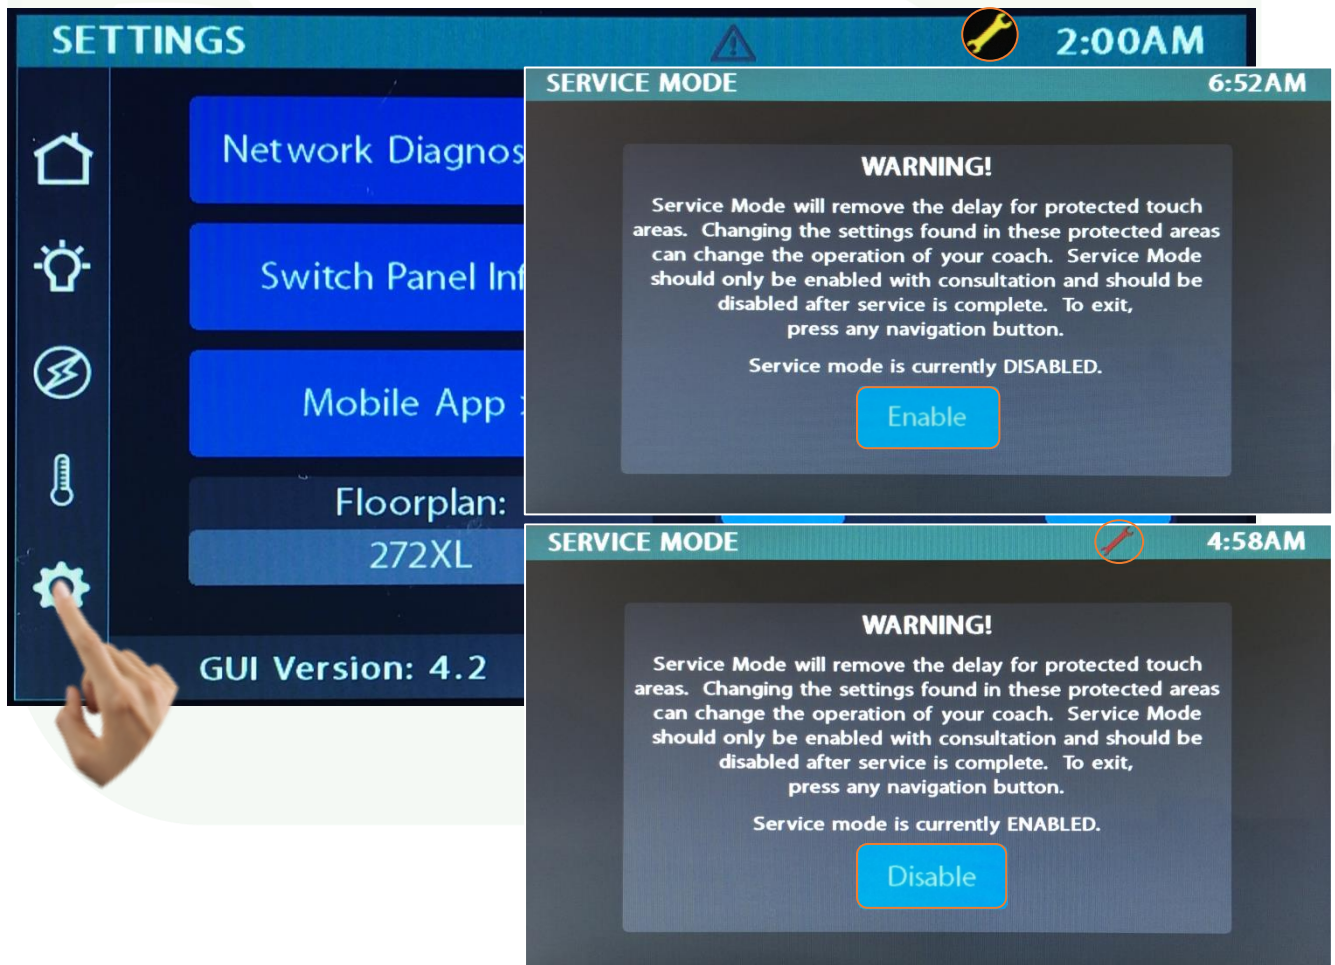




# Vegatouch Eclipse Setup

**Notice:** Make sure that Bluetooth is turned ON in your smart device settings before proceeding.

## Locate the Login Information:

The login information can be found by clicking on the Mobile App button on the settings page of the touchscreen or from the Eclipse module's label.

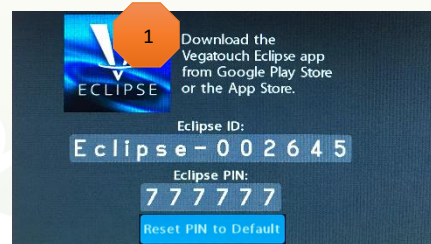

## Download:

Download Vegatouch Eclipse from the Google Play store or the App Store. Once the download has finished, install the app and open it.




1

**Press and Hold the logo for 7 seconds to switch between Mira and Eclipse if necessary.**

## Setup:


Tap SCAN to find the Eclipse Module's signal. After scanning, any Eclipse Module in your area will appear on the screen (the list is scrollable). Tap the ID # that matches the one for your Eclipse. Enter the PIN number from the Eclipse label and press AUTHENTICATE to connect to the system. You will need to reset the pin number once prompted. Enter your custom number and tap SET PIN to save.

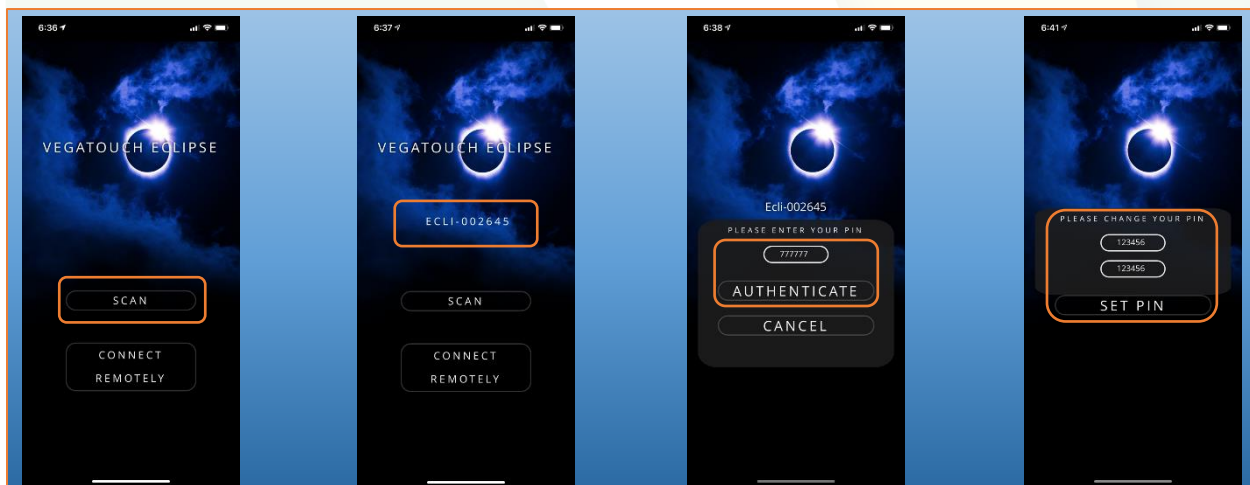

## Notice: iOS Setup Tips

Turn on Bluetooth to allow Vegatouch Eclipse to connect to Accessories.

If you do not have Bluetooth turned ON in your iOS settings, you will see this screen. Do not click OK, you must click SETTINGS. Your Bluetooth Settings page will now appear and you should turn Bluetooth ON.

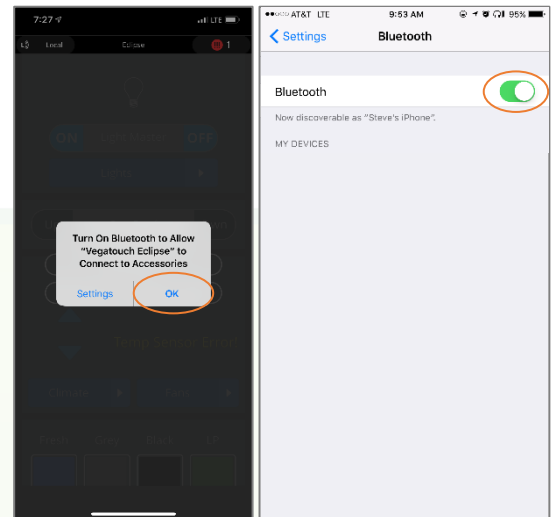

## Location Services Required

To enable Location Services on your Apple device:

1. Go to settings/Privacy/Location Services.
2. Make sure that Location Services is ON.
3. Scroll down to find your app.
4. Tap the app and select “Always allow access to your location”.

## Notice: Android Setup Tips


Allow Vegatouch Eclipse to access this device’s location.

Eclipse will need to be allowed access to your location. Tap ALLOW when you see this screen. If you do not tap allow, the module will not be found in the scan.

## Location Services Required



To enable Location Services on your Android device:

1. Open your phone’s Settings app.
2. Tap Location/App Permission
  - If you don’t see “Location” tap Security & Location/Location.
  - If you have a work profile, tap Advanced/Location.
3. Under “Allowed all the time” and “Allowed only while in use” view the apps that can use your phone’s location, tap it, then choose the location access for the app.
4. To change the App’s permissions, tap it, then choose the location access for the app.

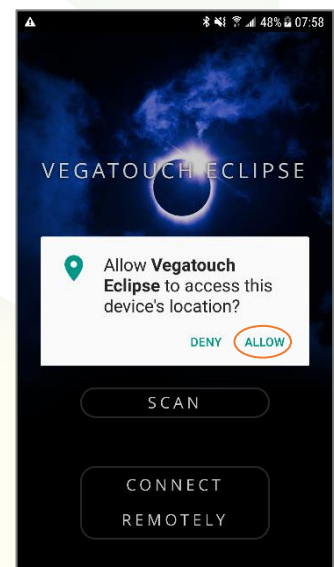

## App Settings:


Access the App Settings page by tapping the triangle (at the bottom of the screen) to expose the Settings button. Tap the gear to visit the settings page.

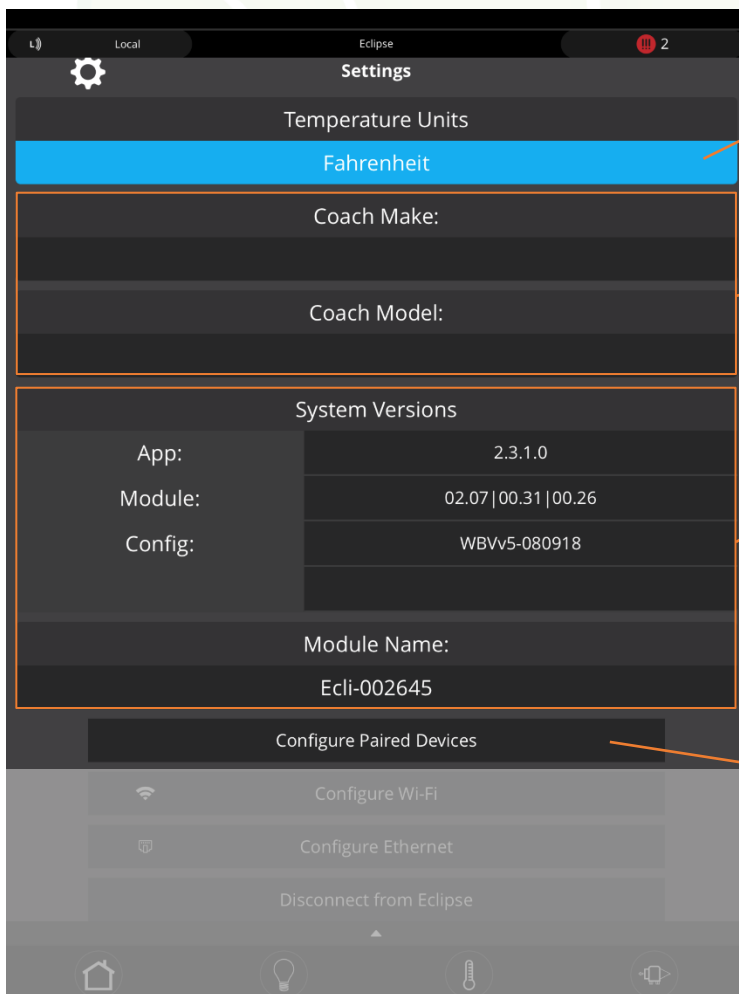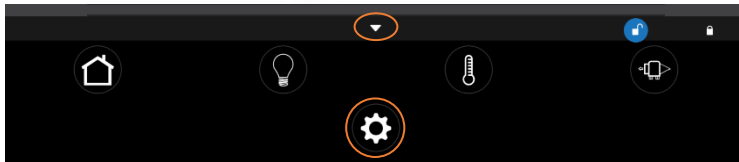

Tap the Temperature Units selection to choose between Fahrenheit and Celsius.

Make and Model of your coach.

System Information and Eclipse Name.

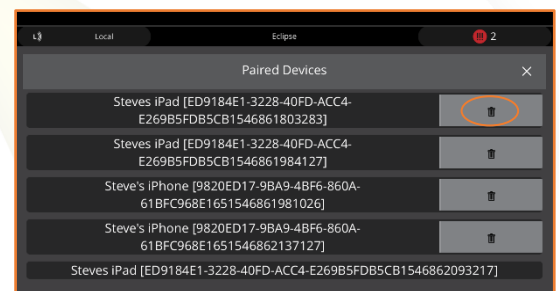




## Configure Paired Devices:

Tap to display a list of devices which are currently paired to Eclipse. Tap the trash can icon to completely remove a specific device from memory. Once removed, this device will no longer have remote access to the system. Note, you cannot remove the device that you are currently using.






## Configure Wi-Fi:

- 1 Tap the available Wi-Fi network that you would like to connect to. If your network is not listed, tap Refresh to scan again.
- 2 Type in the Security Key and tap Connect to join the network.
- 3 A white Ball and Socket will display once connection has been made. A Green Checkmark signifies that the password has been stored in memory.
- 4 Visit the Saved Networks page to quickly connect to previously used networks.

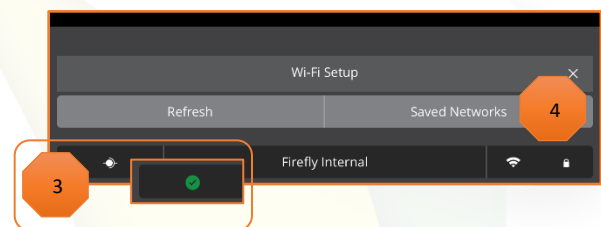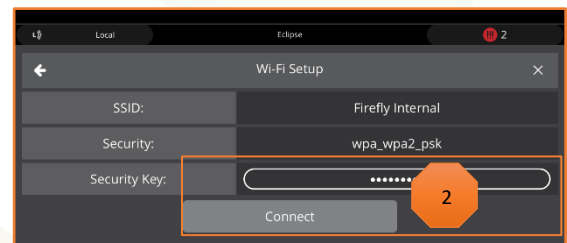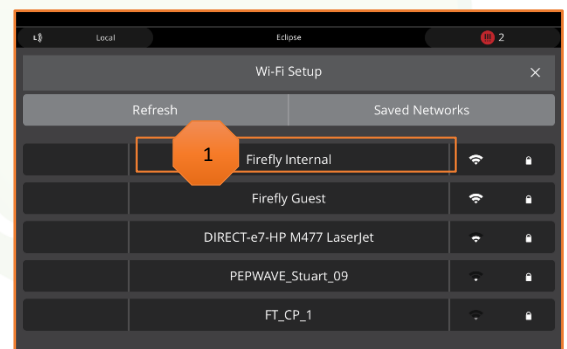

## Configure Ethernet:

- 1 Tap Configure Ethernet if you'd prefer to use your Eclipse with a wired ethernet connection. Tap the Prefer Ethernet checkmark if you'd prefer to use an ethernet connection exclusively.

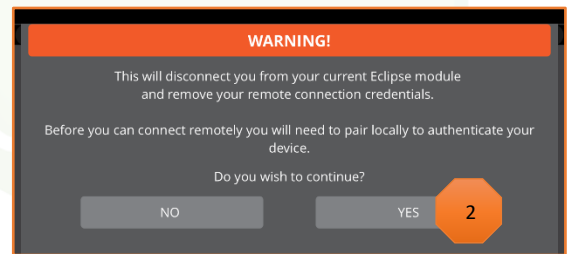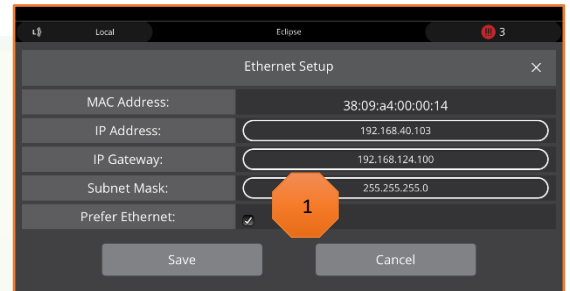
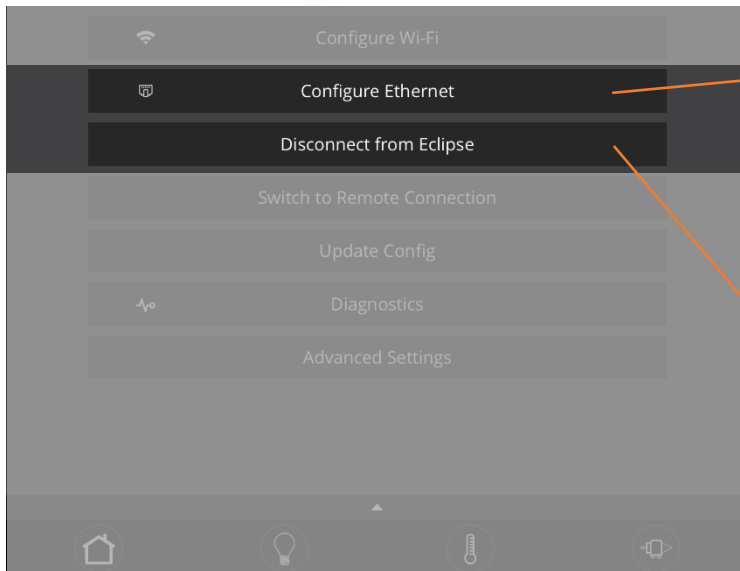


## Disconnect from Eclipse:

- 2 Tap YES if you'd like to disconnect from Eclipse. Note, before you can connect remotely, you'll need to pair locally to authenticate your device.



## Switch to Remote Connection:

- 1 Tap to switch between a Local and Remote location. The Local/Remote switch page can also be reached by tapping Local or Remote on the top bar.

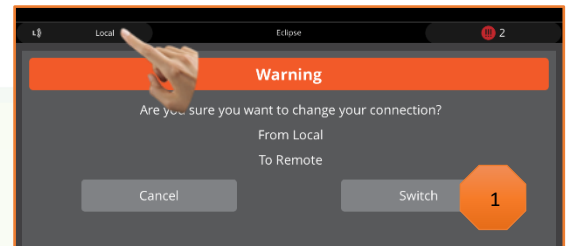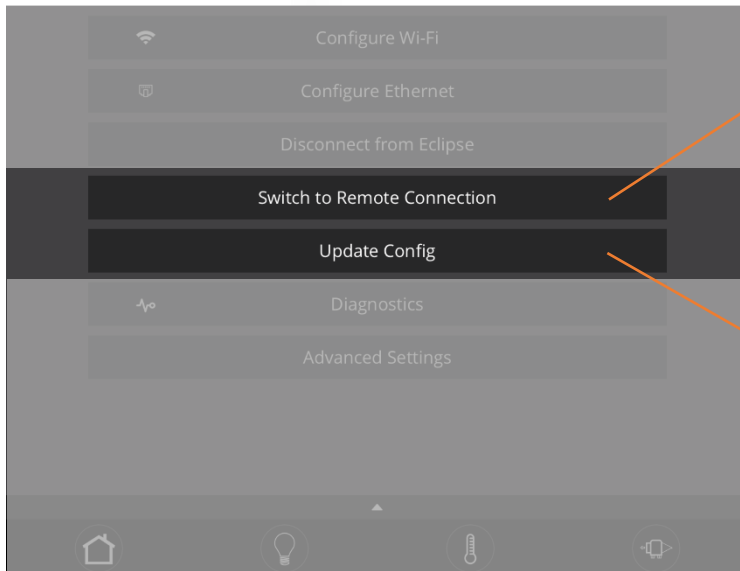


Tap to update the config from the cloud.

## Diagnostics:

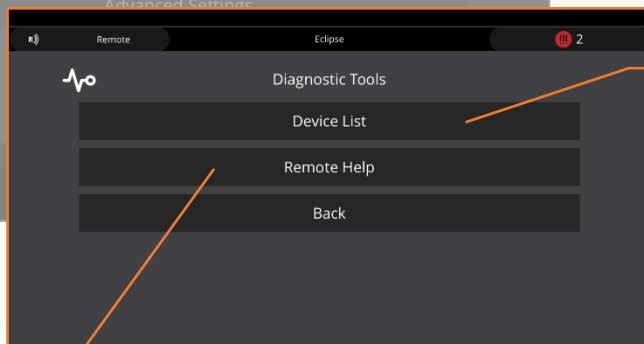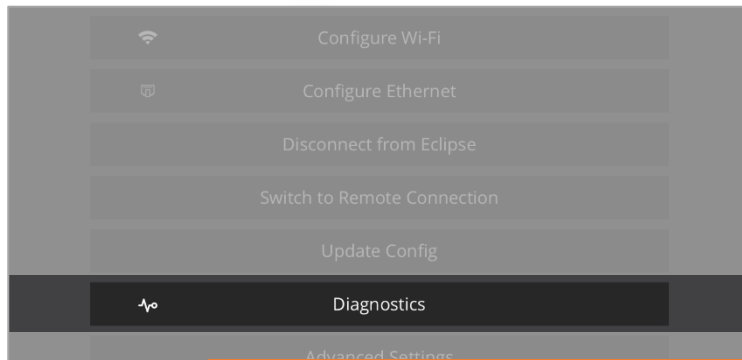

Tap to display a list of currently connected devices.



Remote Help is available by contacting Firefly Integrations. Do not enable Remote Help without consultation.

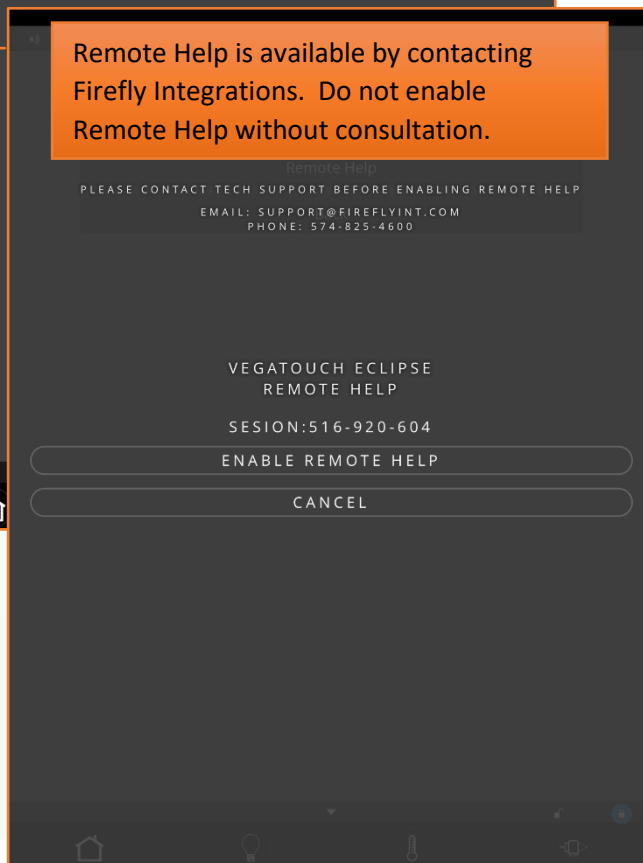



## Advanced Settings:

- 1 Tap to set a custom pin number.
- 2 Tap to completely reset the device. A warning page will appear which will require you to confirm the action.

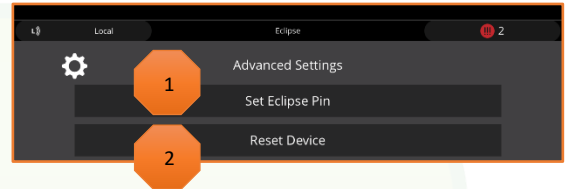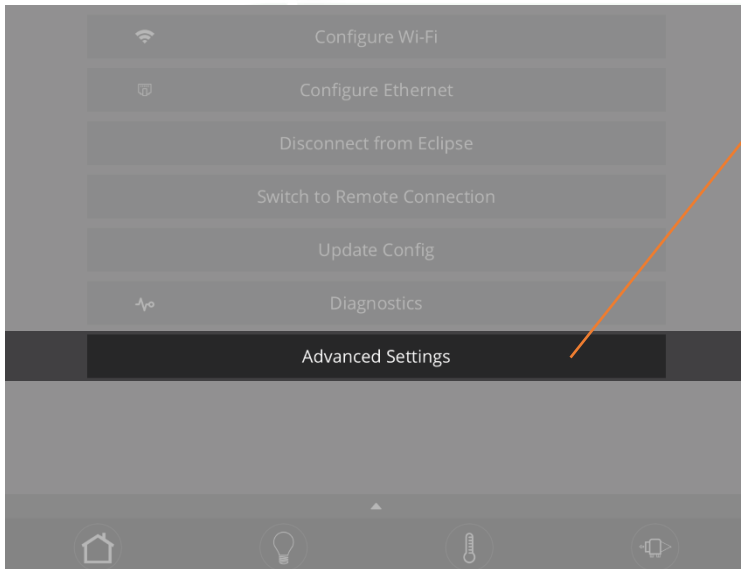




## SSP17 Switch Panels

Your coach uses SSP17 switch panels to control lighting and other functions. Lights that are dimmable will have Up/Down arrows next to the icon. Press and hold these buttons to ramp the brightness up and down. Each time that a button is pressed, the Operational LED will illuminate green to indicate that the command has been sent to the touchscreen.

SSP17 switch panels use wireless RF technology to communicate with the Lyra touchscreen. These switches are powered by a 2032-coin cell battery. If you press a switch panel button and the operational LED does not illuminate, you'll need to change the battery. Simply use your fingers to pry the switch panel away from the wall-mounted backplate to access the battery compartment on the back of the switch.

Once you replace the battery, line the switch panel up with the backplate and apply pressure to snap the switch panel back into place.

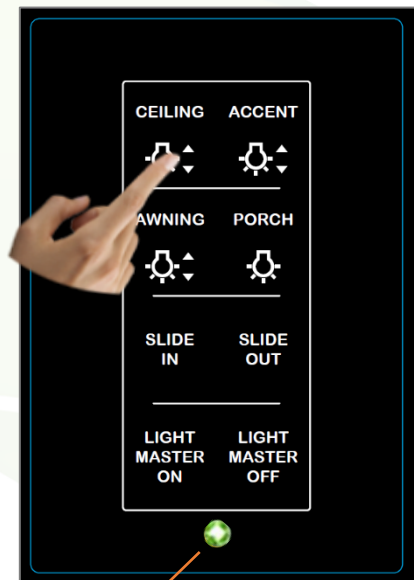

Operational LED



Slide the battery up to remove.



## G12 DC Panel


Your G12 control panel is the power distribution center for the coach. This panel receives the signals sent from your switch panels and performs the actions that have been requested by activating and deactivating the required circuits.

Every circuit controlled by the G12 is numbered and listed on a black label (load list) which is usually mounted next to the G12 panel. Troubleshooting Example - If you press the Front Accent Lights button on your Lyra screen and the lights don't come on, check the Network Diagnostics Page to see if the light for Output 27 shows status. If it does, you will want to check output voltage on that pin to make sure that the G12 is sending power to the lights (Fig 1).



Figure 1

Test **Positive** Output Channels as shown:

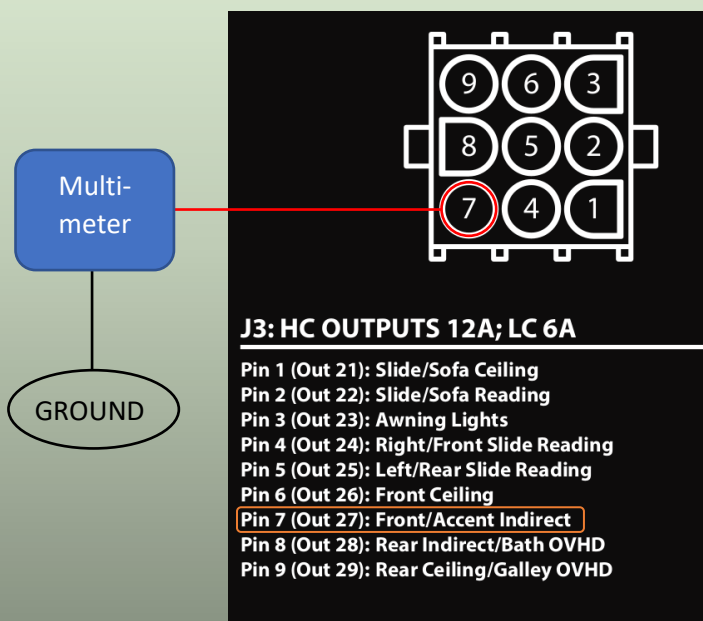



# Networking

Your distribution panel and touchscreen are connected via your coach's RV-C network. Each component will have a NET LED that is used to show network status. If a NET LED is displaying anything other than solid green and some of the panel's functions are not working, please contact your manufacturer for Technical Support.

## Net LED Locations:

















# Network Status Indicators

Every component of the Firefly system uses an LED to communicate network status. Use the key below to determine the network status of your hardware.

## **Panel Network Status Indicator – Applies to any device with a network indicator:**

-  /  Fast flashing Green Light (4 times/sec) – Device is attempting to make initial connection.
-  /  Slow flashing Green Light (1 time/sec) – Device was online but has been offline for at least 5 sec.
-  Solid Green – Device is connected to network and is communicating properly.
-  Solid Red – Device has gone offline and is not connected to a network.
-  /  Alternating Red & Orange – Device has gone offline and is trying to re-connect (within 30 sec).
-  /  Alternating Green & Orange – Device is currently online but has gone offline 2 or more times

Note: The NET LED for Eclipse/Mira Modules will operate differently. Please see the next page.



# Mira NET LED Status Key

The NET LED on your Eclipse/Mira module can change color in different situations. Use the following key to determine the operational status of your module.


	Off	Device has no power or has completely failed
	Fast flashing green (4 times/sec)	Device is attempting to make initial connection to the CAN network and good files
	Solid green	Device is operating correctly and has seen a CAN message in the past 5 seconds and good files
	Slow flashing green (1 time/sec)	Device was active on the CAN bus but has not seen a valid message in 5 seconds and good files
	Alternating red and yellow	Device has not seen CAN messages in 30 seconds and good files
	Alternating yellow and green	Device is currently active on the CAN bus but has not seen a CAN message within a 30s interval 2 for more times since the last power cycle and good files
	Solid red	Device has not seen a CAN message in the past 60 seconds and good files
	Fast alternating green and blue (4 times/sec)	Device is attempting to make initial connection to the CAN network and corrupted files
	Solid blue	Device is operating correctly and has seen a CAN message in the past 5 seconds and corrupted files
	Slow alternating green and blue (1 time/sec)	Device was active on the CAN bus but has not seen a valid message in 5 seconds and corrupted files
	Alternating red and blue	Device has not seen CAN messages in 30 seconds and corrupted files
	Alternating yellow and blue	Device is currently active on the CAN bus but has not seen a CAN message within a 30s interval 2 or more times during a power cycle and corrupted files
	Solid purple	Device has not seen a CAN message in the past 60 seconds and corrupted files
	Flashing white	Device pin is being reset
	Solid yellow	Device pin has been reset
	Flashing blue	Device does not have a valid application
	Flashing red (2 seconds)	Factory test: Red LED
	Flashing green (2 seconds)	Factory test: Green LED
	Flashing blue (2 seconds)	Factory test: Blue LED

**Customer:** COACH HOUSE      **Model:** ALL      **Revision:** 4V2  
**Raw Part:** 7000700 G12 w/Probe      **Custom Part:** 11010002      **Date:** 09/08/20 AG  
**Outputs:** 1-44      **Program Version:** \_\_\_\_\_

J4: HIGH CURRENT OUTPUTS 12A; LOW CURRENT 6A				
Pin	Out	Load	AMP	O/C
1	30	BATH CEILING	4A	27s
2	31	COURTESY	4A	27s
3	32	TV CABLIGHTS (DIM)	4A	27s
4	33	PORCH	4A	27s
5	34	P/S OVHD/DINETTE CAB (DIM)	4A	27s
6	35	D/S OVHD/DINETTE READING (DIM)	4A	27s
7	36		4A	27s
8	37		4A	27s
9	38		4A	27s
10	39		4A	27s
11	40		4A	27s
12	41		4A	27s
13	42		4A	27s
14	43	FURNACE FRONT	6A	53s
15	44	AWNING POWER	10A	27s

J12: THERMISTORS	
Pin	Load
1	THERMISTOR
2	
3	
4	
5	
6	
7	THERMISTOR (GND)
8	
9	
10	
11	
12	

J11:TANKS	
Pin	Load
1	FRESH TANK
2	GREY TANK
3	BLACK TANK
4	
5	
6	
7	
8	
9	FRESH TANK GND
10	GREY TANK GND
11	BLACK TANK GND
12	
13	
14	
15	
16	

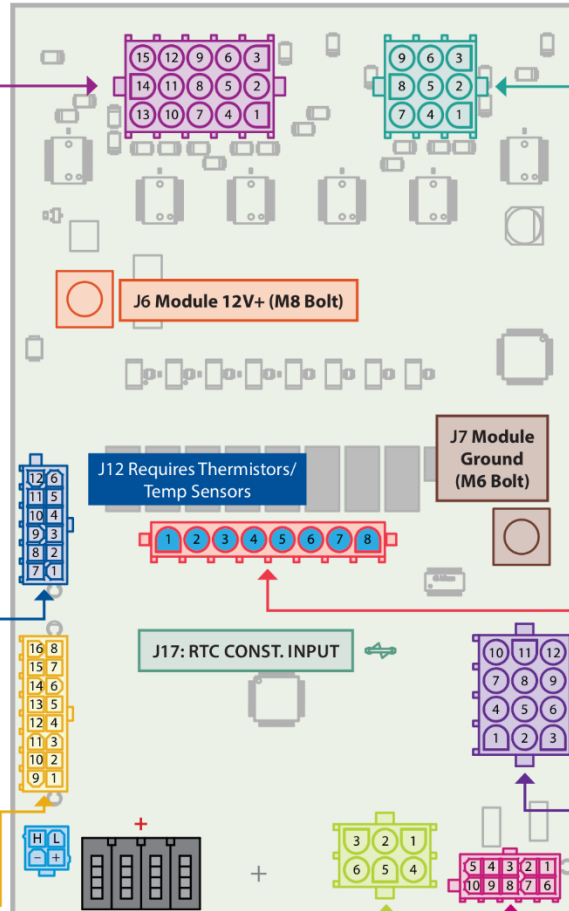

J13: LPG	
Pin	Load
1	LP GAS (SIG)
2	
3	CHASSIS (12V)
4	LP GAS (GND)
5	
6	GEN RUN (12V)

J3: HIGH CURRENT OUTPUTS 12A; LOW CURRENT 6A				
Pin	Out	Load	AMP	O/C
1	21	SLIDE/ SOFA CBLING (DIM)	4A	.27s
2	22	SLIDE/ SOFA READING (DIM)	4A	.27s
3	23	AWNING LIGHTS (DIM)	4A	.27s
4	24	RIGHT/ FRONT SLIDE READING (DIM)	4A	.27s
5	25	LEFT/ REAR SLIDE READING (DIM)	4A	.27s
6	26	FRONT CBLING (DIM)	4A	.27s
7	27	FRONT/ ACCENT INDIRECT (DIM)	4A	.27s
8	28	REAR INDIRECT/ BATH OVHD (DIM)	4A	.27s
9	29	REAR CBLING/ GALLEY OVHD (DIM)	4A	.27s

J8: HIGH CURRENT RELAYS (20A MAX)				
Pin	Out	Load	AMP	O/C
1	1	FRONT SLIDE EXT/ SOFA DOWN (R)	20A	1.0s
2	2	FRONT SLIDE RET/ SOFA UP (RP)	20A	1.0s
3	3	REAR SLIDE EXT/ SOFA FORWARD (R)	20A	1.0s
4	4	REAR SLIDE RET/ SOFA REVERSE (R)	20A	1.0s
5	5	OVHD CAB LIGHTS	10A	.26s
6	6	SHOWER LIGHTS	10A	.26s
7	7	WATER PUMP	15A	2.0s
8	8	SLIDE PUMP	20A	1.0s






J10: HALF BRIDGES 1A (PROGRAMMABLE POLARITY)			
Pin	Out	Load	+/-
1	9		+
2	10		+
3	11		+
4	12		+
5	13		+
6	14		+
7	15		+
8	16		+
9	17		+
10	18		+
11	19	GEN START	-
12	20	GEN STOP	-

J5: INPUTS		
Pin	Load	+/-
1	PARKBRAKE SLIDELOCK	—
2		—
3		—
4		—
5		—
6	IGNITION	+
7		+
8	AC POWERSENSE	+
9	DOORPIN	+
10		+

## Add Placeholders

Pin Legend: ■ Reverse Polarity






G12 Master 1v5 Updated 05/28/2020

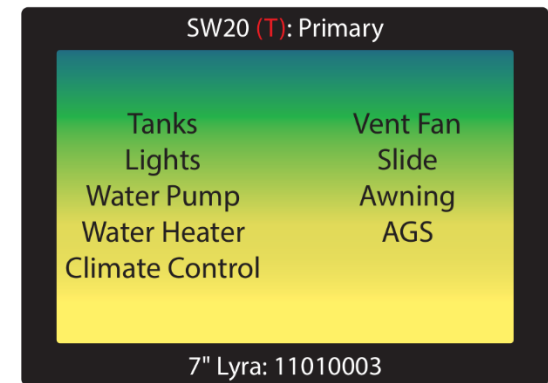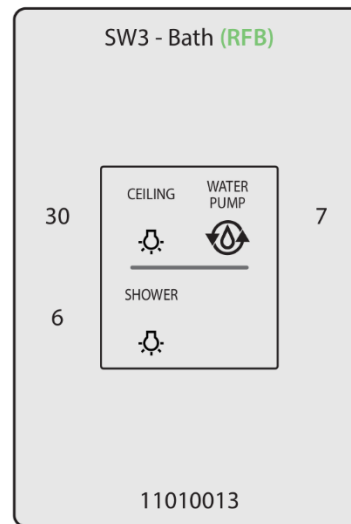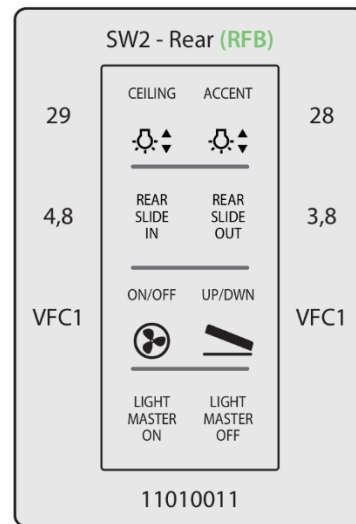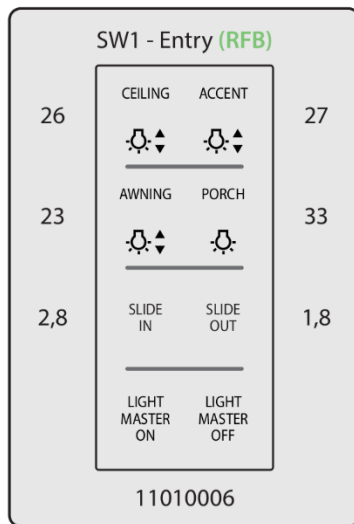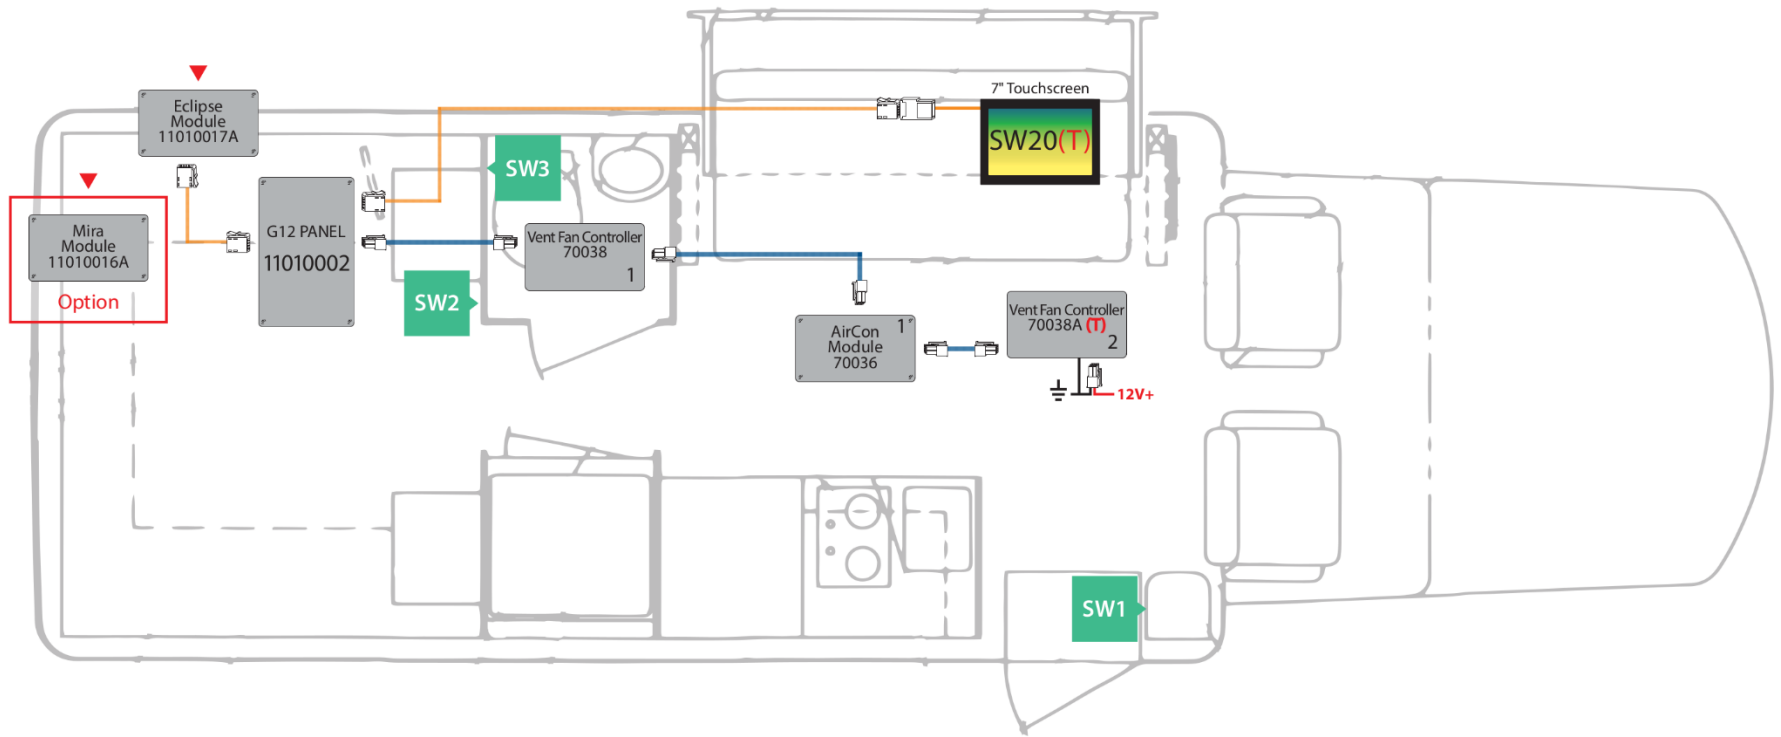

Coach House - 272XL Kit: 11000014A		
Network Wiring Diagram and Switch Panel Layout		
SSP-17 RFB & 7" Lyra	NWD REV 4v1	10/23/20

DI: MD	<b>Network Legend</b> Trunk Cable ——— Drop Cable ——— Switch Position ■	<b>Drop Cable Connections</b> 
PI:		



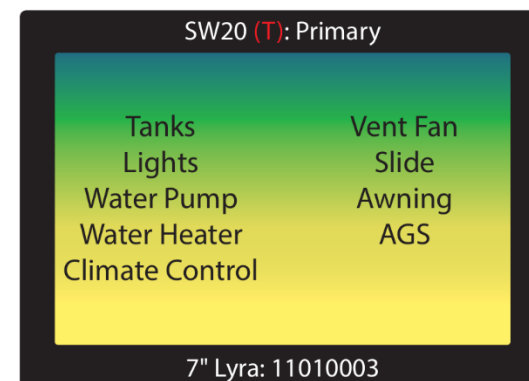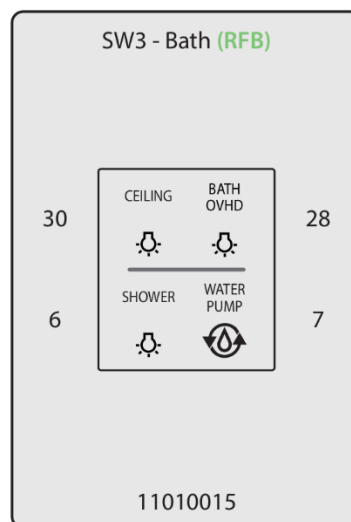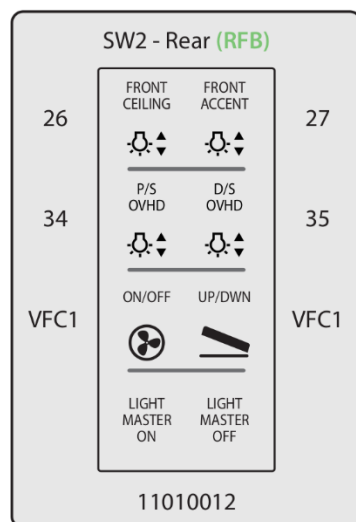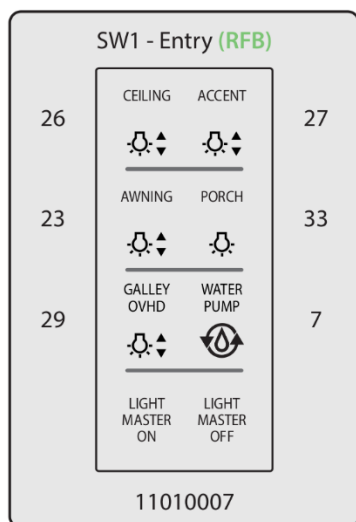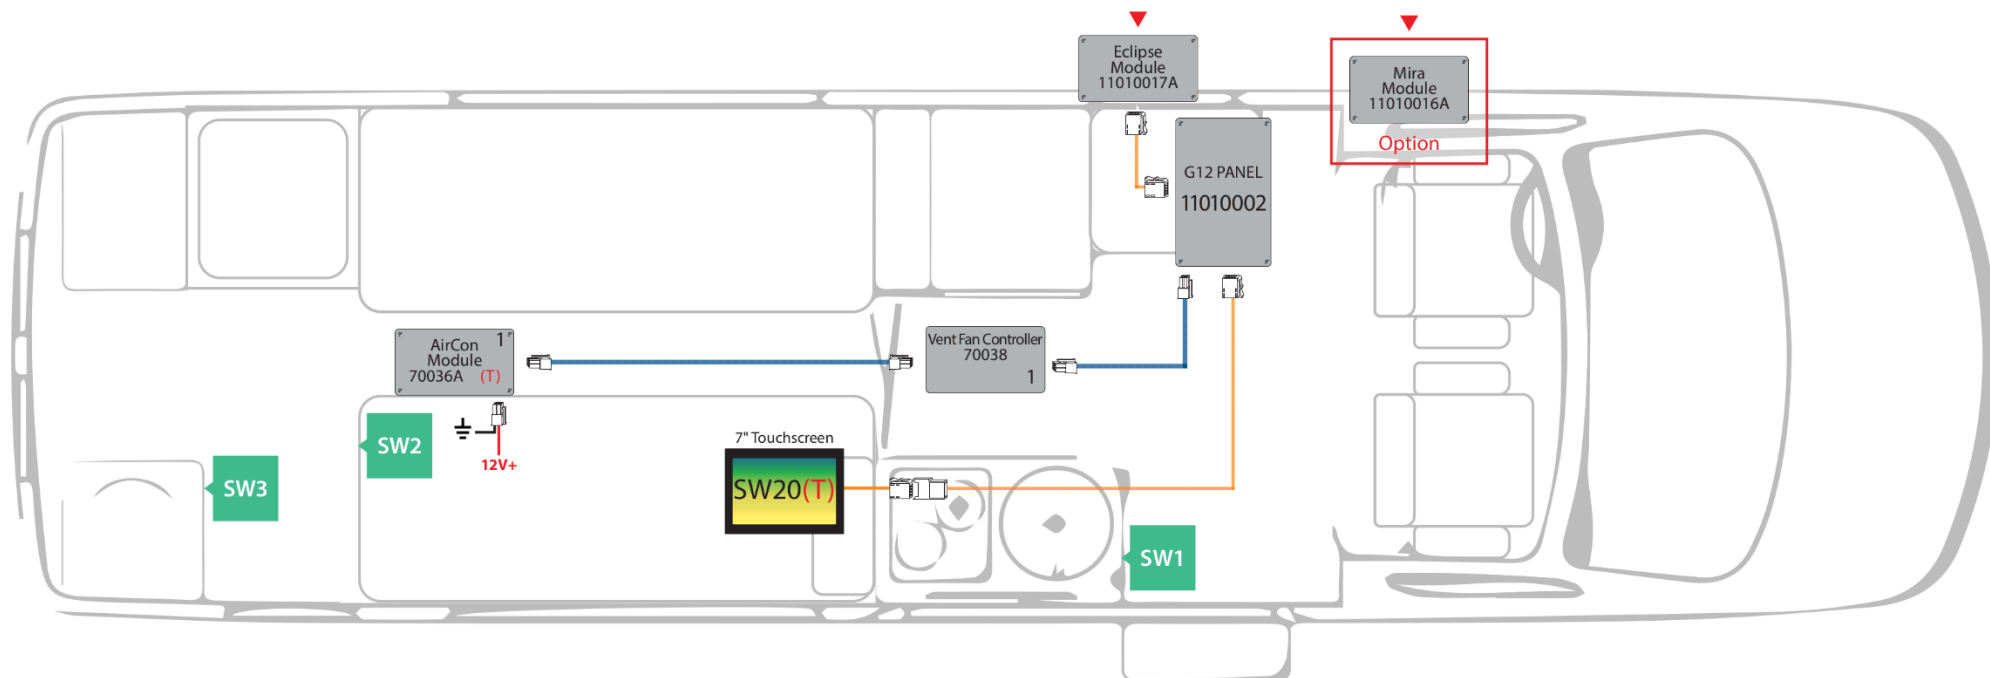

**Coach House: Arriva**

**Kit: 11000016A**

**Network Wiring Diagram and Switch Panel Layout**

SSP-17 RFB & 7" Lyra

NWD REV 4v3

10/23/20

 
DI: MD






PI:

**Network Legend**

Trunk Cable  
Drop Cable  
Switch Position






Drop Cable Connections



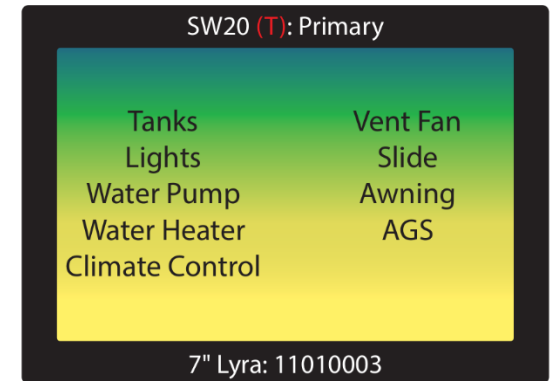
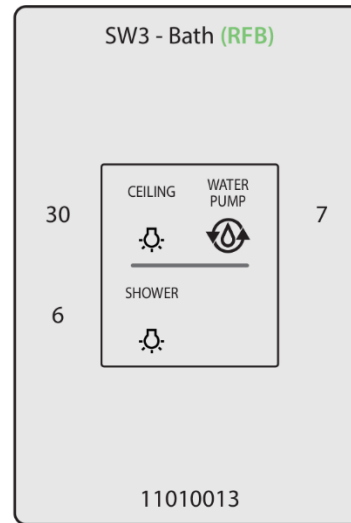
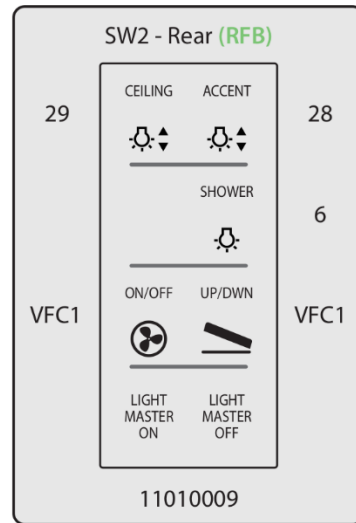
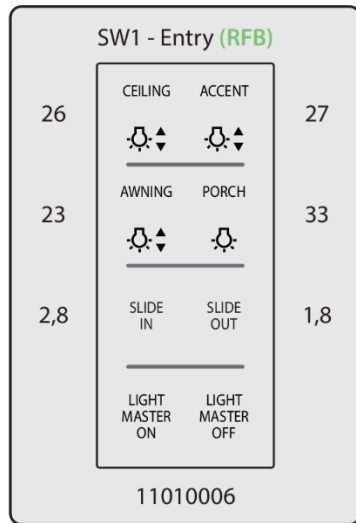
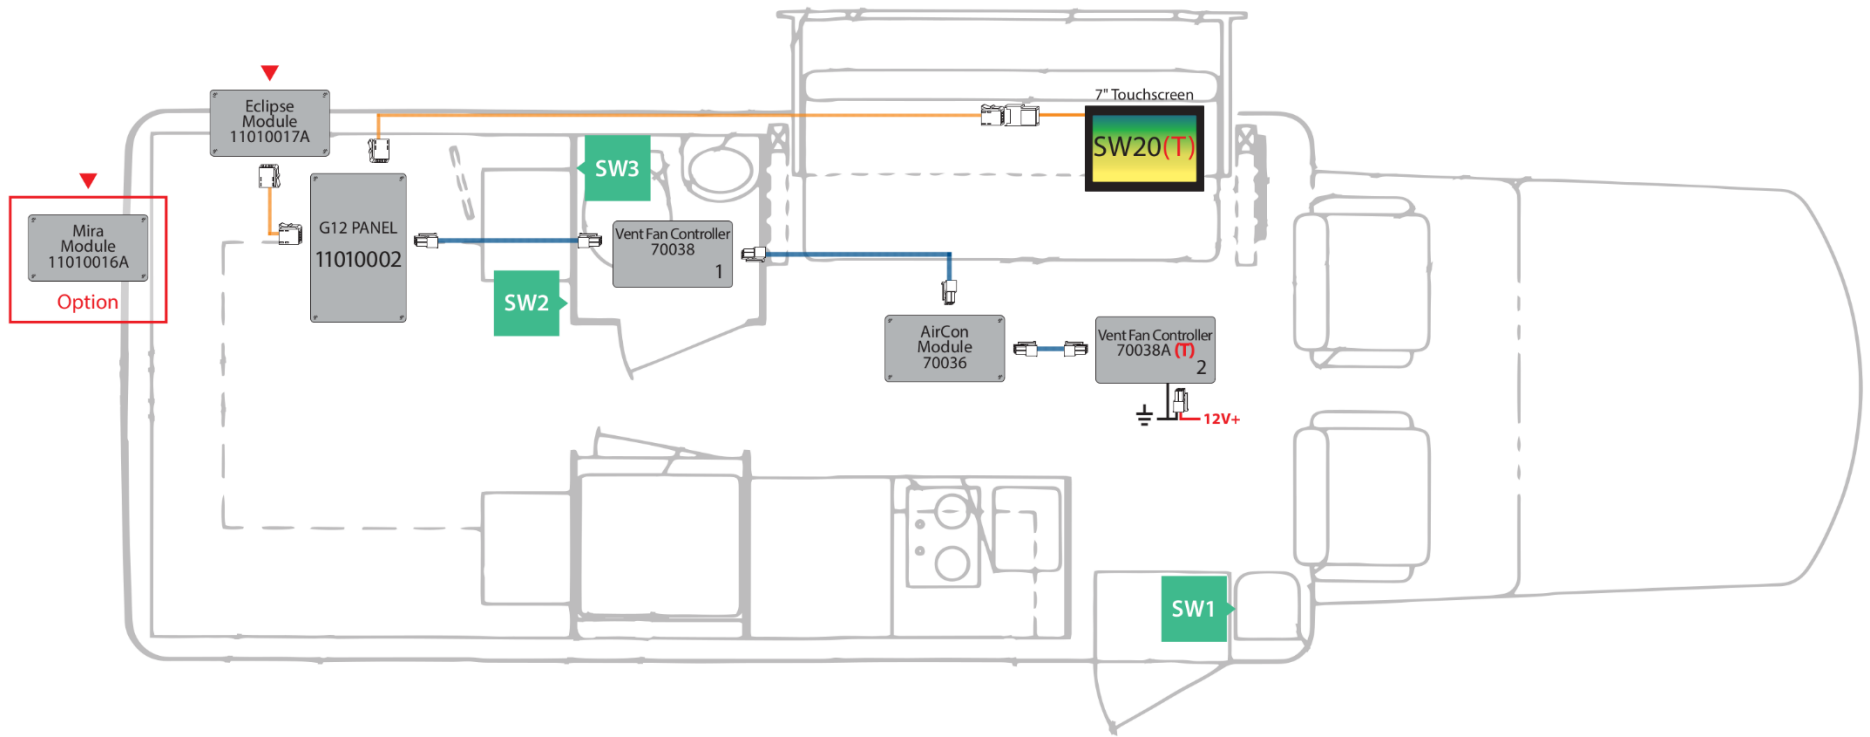


**SW1 Ordered Outside of Kit**

Coach House: Diesel Kit: 11000010A				DI: MD/AG	Network Legend		Drop Cable Connections
Network Wiring Diagram and Switch Panel Layout				PI:	Trunk Cable	—	
SSP-17 RFB & 7" Lyra		NWD REV 4v4	10/23/20		Drop Cable	—	
					Switch Position	■	

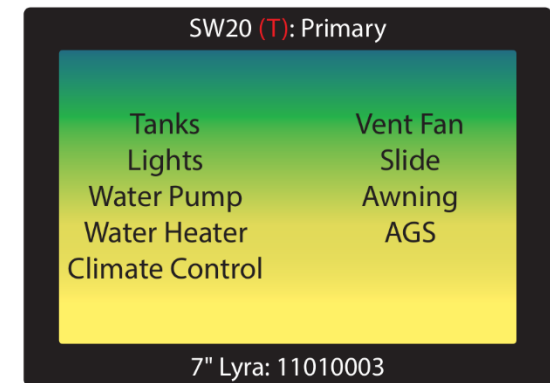
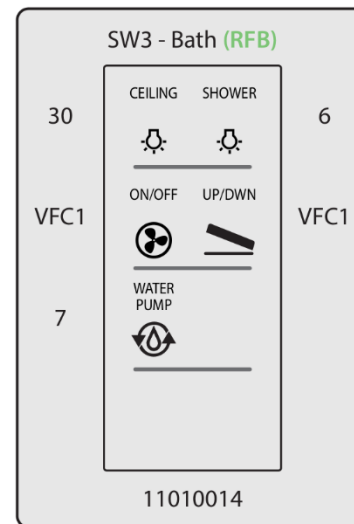
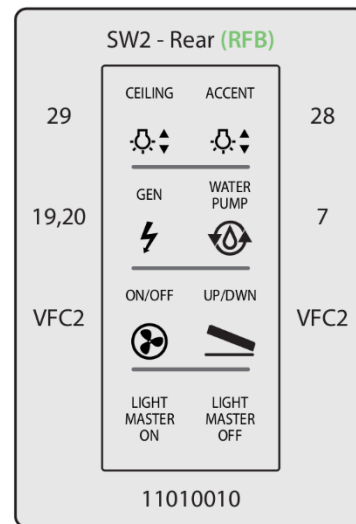
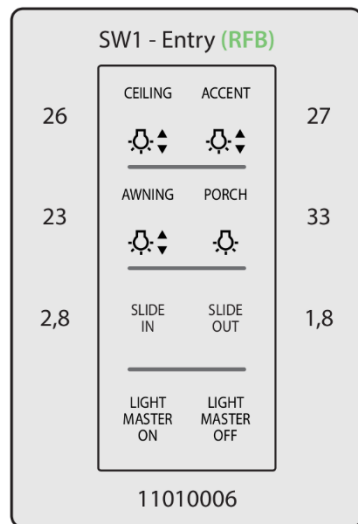
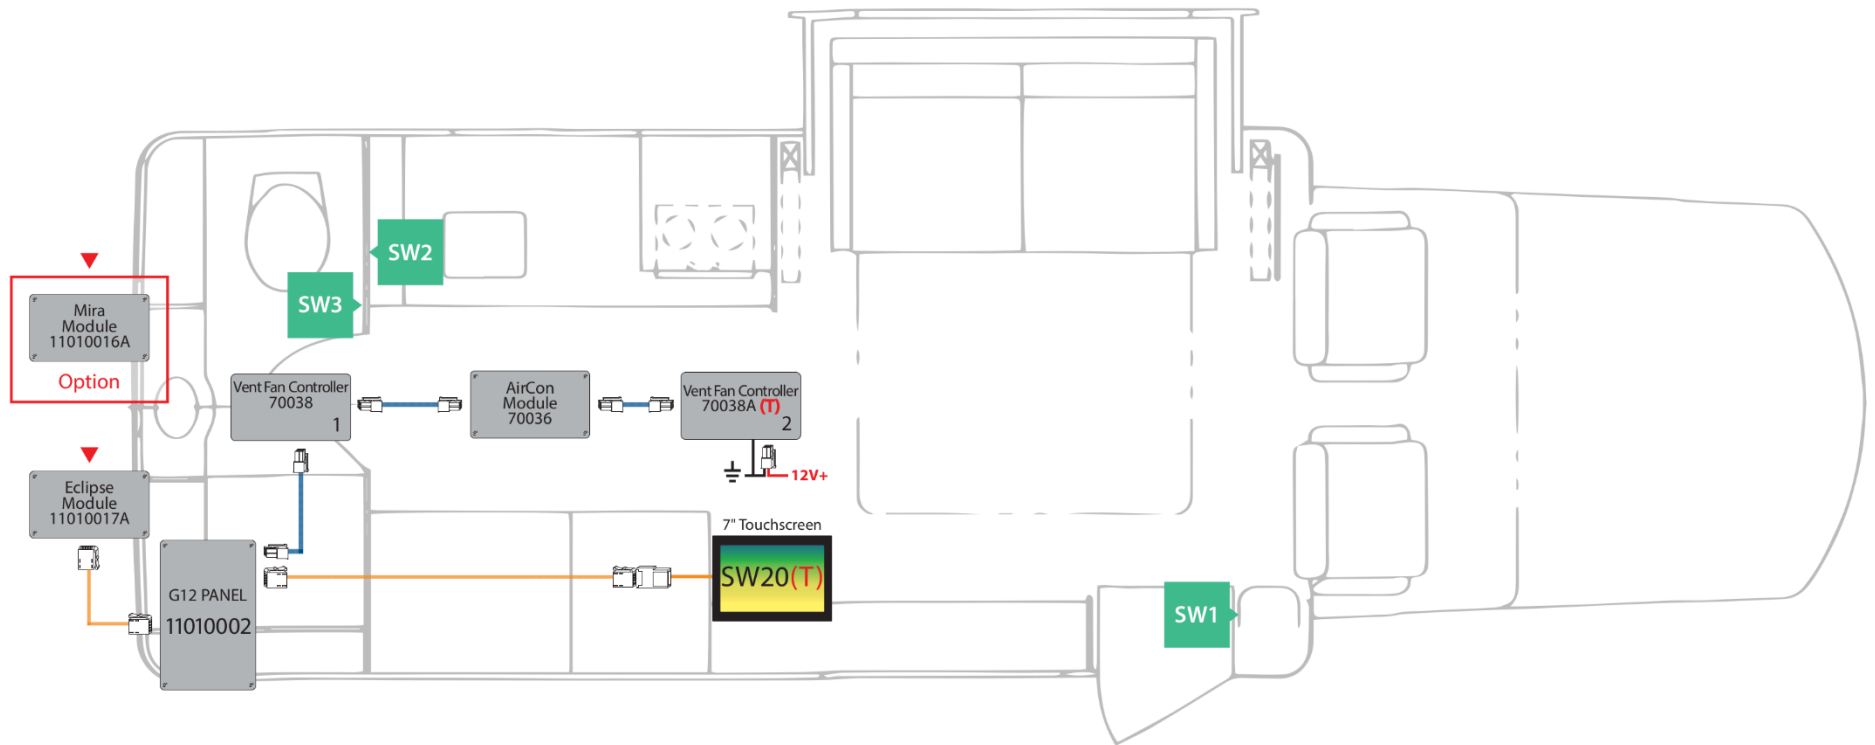


<b>Coach House: Front Sofa Kit: 11000011A</b>				DI: MD	<b>Network Legend</b>	Drop Cable Connections
Network Wiring Diagram and Switch Panel Layout				PI:		
SSP-17 RFB & 7" Lyra		NWD REV 4v2	10/23/20		Trunk Cable	
					Drop Cable	
					Switch Position	

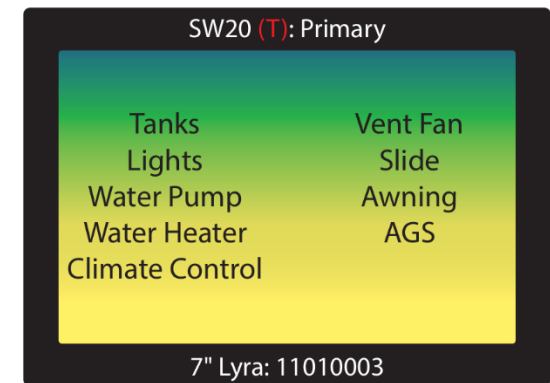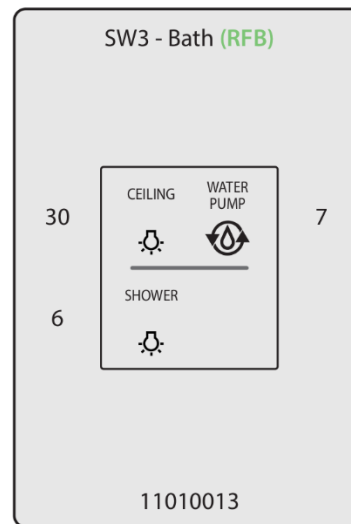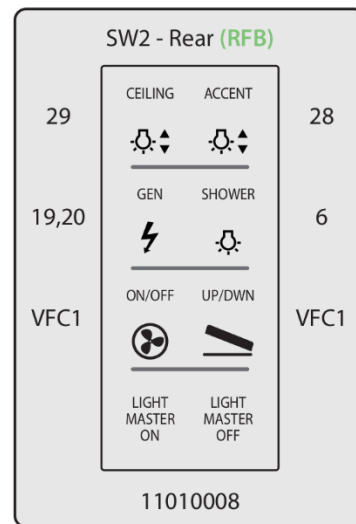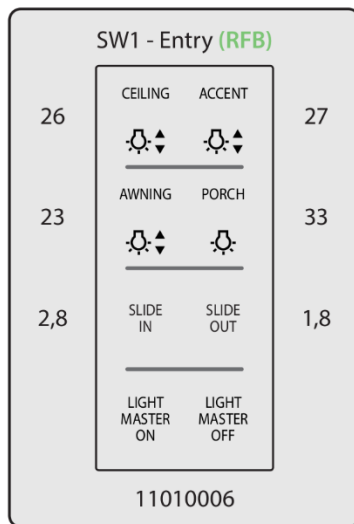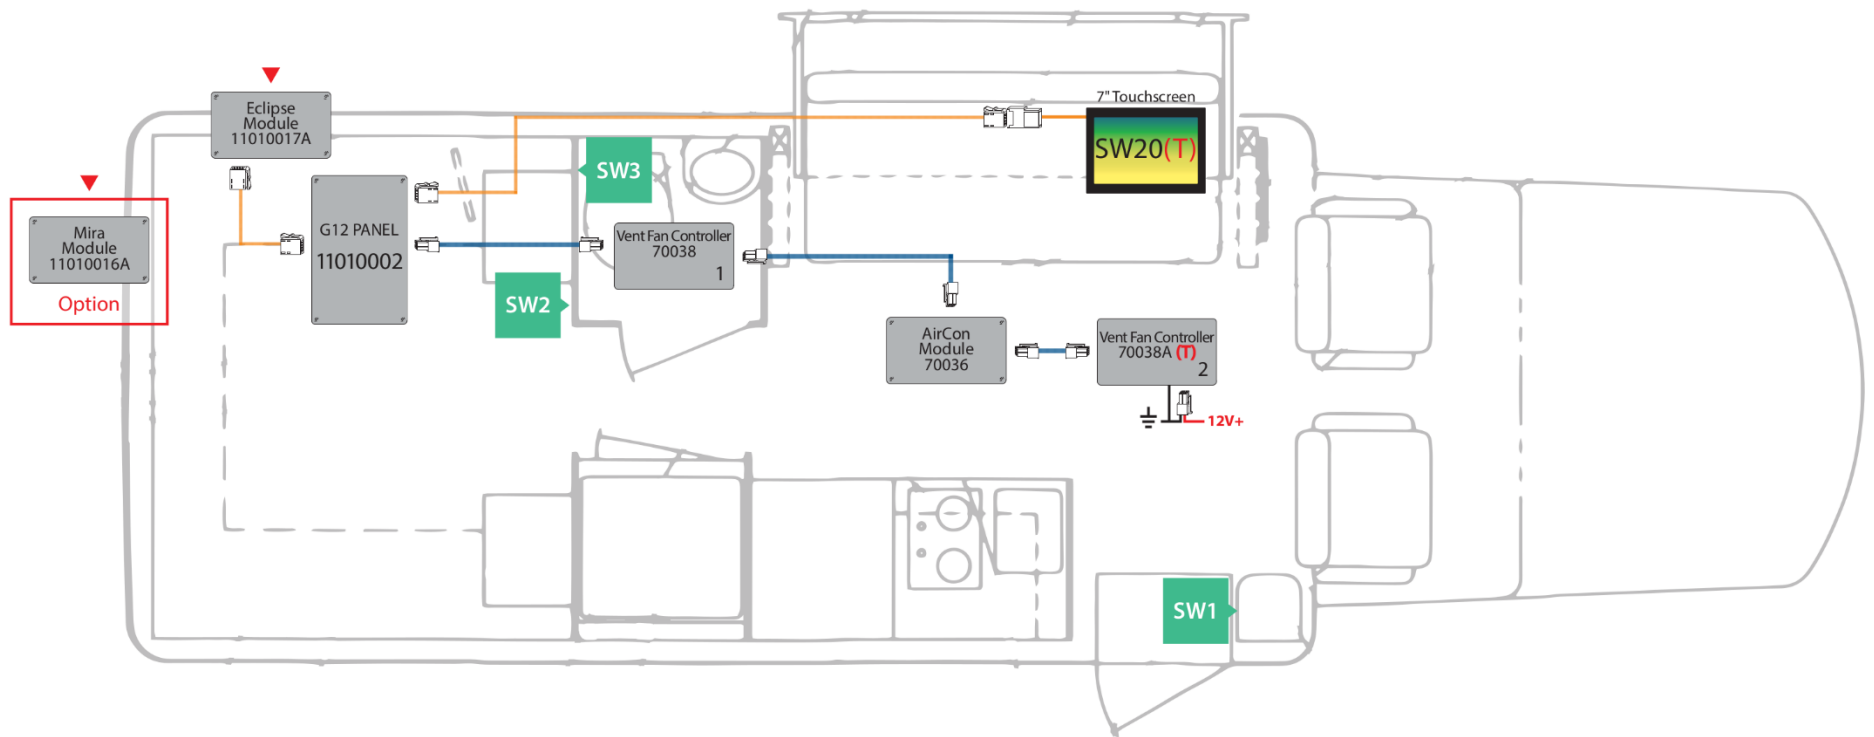






<b>Coach House: Multi Kit: 11000013A</b>		
Network Wiring Diagram and Switch Panel Layout		
SSP-17 RFB & 7" Lyra	NWD REV 4v2	10/23/20

DI: MD	<b>Network Legend</b>	Drop Cable Connections
PI:		
	Trunk Cable	Black
	Drop Cable	Blue
	Switch Position	White

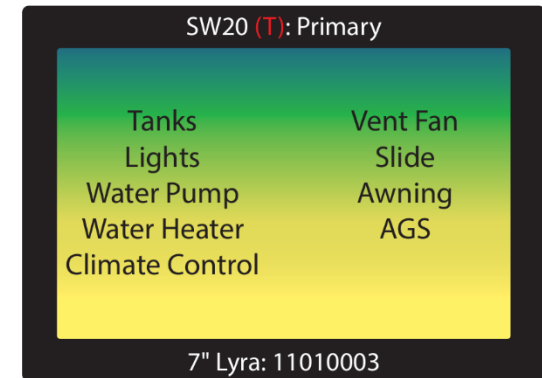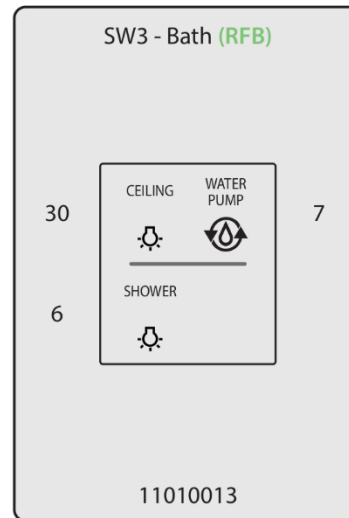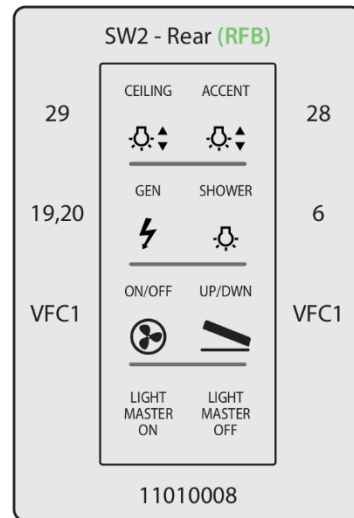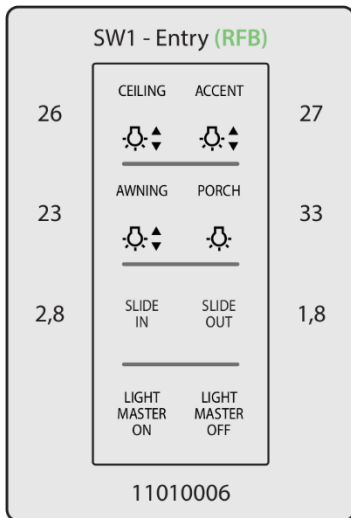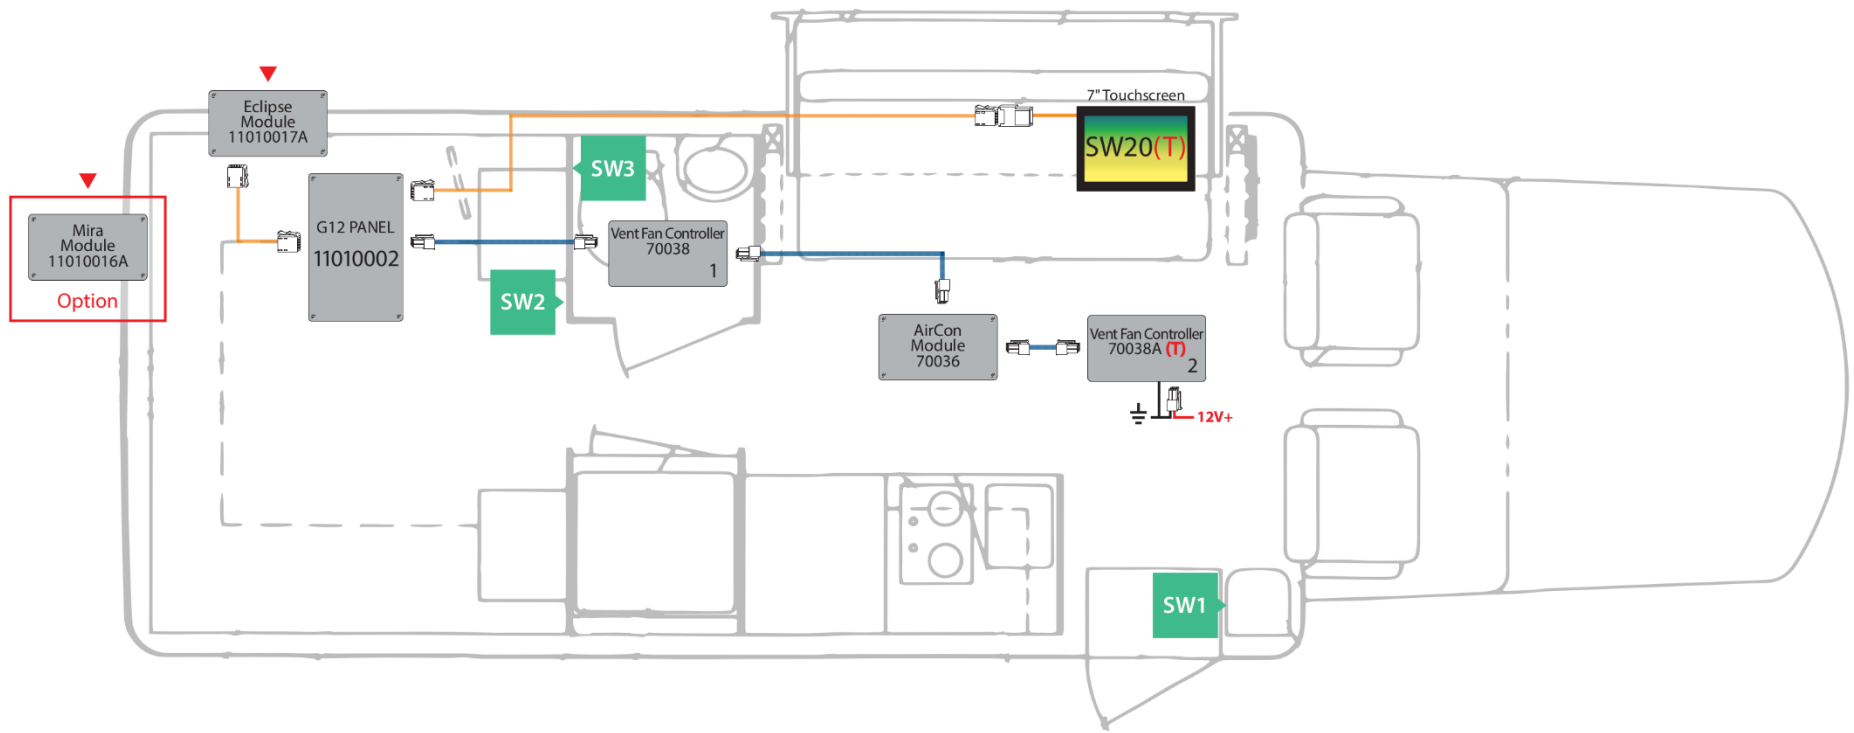

<b>Coach House : Queen Kit: 11000012A</b>			DI: MD	<b>Network Legend</b>		Drop Cable Connections 
Network Wiring Diagram and Switch Panel Layout			PI:	Trunk Cable		
SSP-17 RFB & 7" Lyra	NWD REV 4v2	10/23/20		Drop Cable		
				Switch Position		



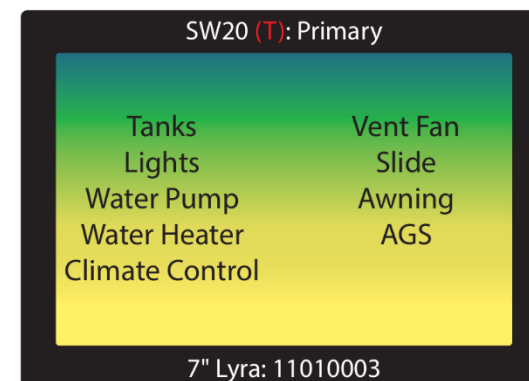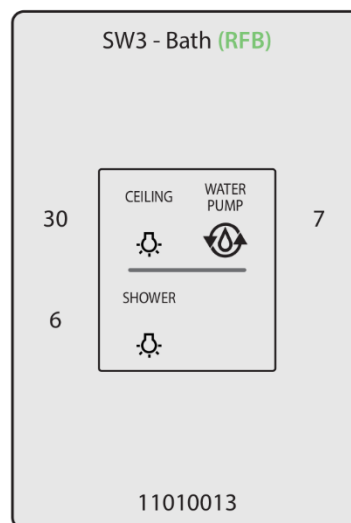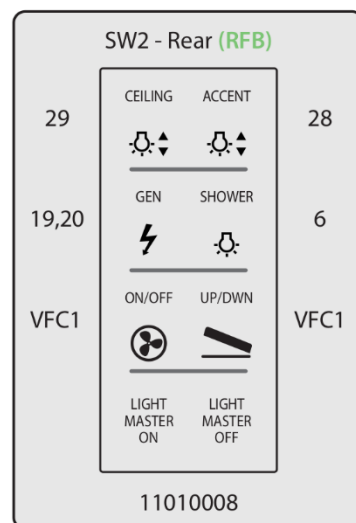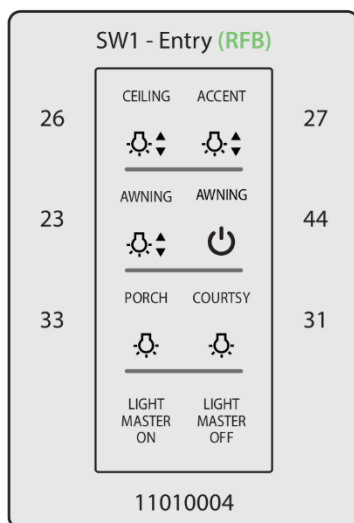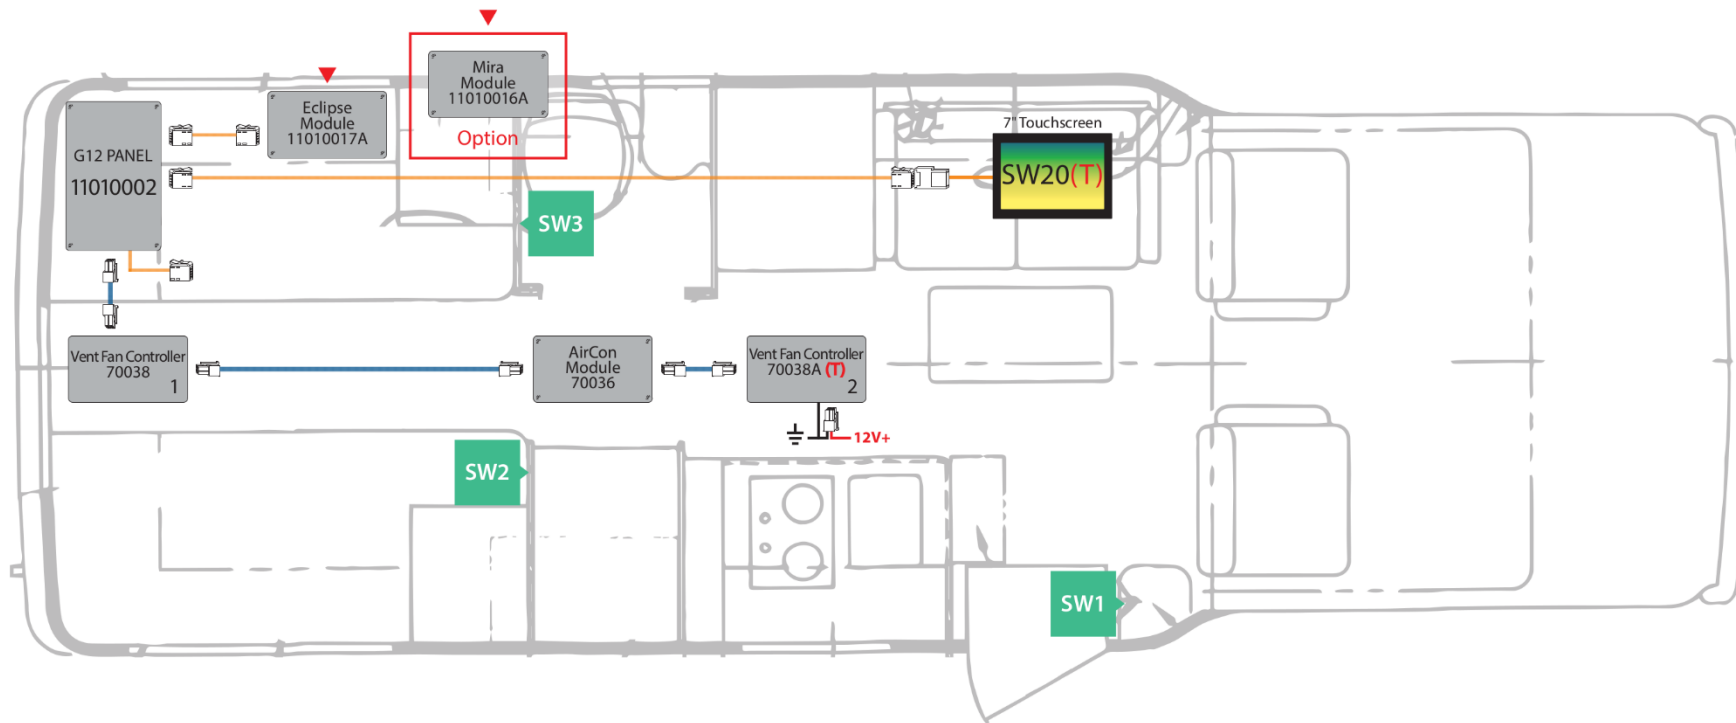

Coach House: Non-Slide Kit: 11000009A			DI: MD	Network Legend		Drop Cable Connections
Network Wiring Diagram and Switch Panel Layout			PI:	Trunk Cable		
SSP-17 RFB & 7" Lyra	NWD REV 4v2	10/23/20		Drop Cable		
				Switch Position		