Service Tips

WIT Club News – February/March 2009

TIRE AND LOADING INFORMATION

kg or

COLD TIRE PRESSURE

324KPS, 47PSI


483KPS, 70PSI

483KPS, 70PSI

SEATING CAPACITY: TOTAL 4, FRONT 2, REAR 2 The combined weight of occupants and cargo should

NEW WEIGHT LABEL (CARGO CARRYING CAPACITY)

In addition to the standard Winnebago certification label. Industries is implementing the new federal "MOTORHOME OCCUPANT CARGO AND CARRYING CAPACITY" label (See Figure 1). The new label provides the motor home's occupant and cargo carrying capacity (OCCC) along with the number of seat belt positions in the vehicle (Safety belt equipped seating capacity).

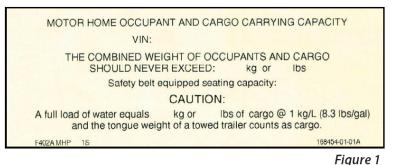

never exceed

SIZE

LT22575R16E

LT22575R16E

LT22575R16E

TIRE

FRONT

REAR

SPARE

Figure 2

The label also provides the weight of a full load of water (@ 1kg/L or 8.3 lbs/gal) and advises the user that this weight, along with the tongue weight, counts as cargo.

All new motor homes 10,000 lbs GVWR and over will have:

- 1.A permanent OCCC label (See Figure 1) in the driver's area next to or near the certification label.
- 2.An identical temporary OCCC label on the forward-most passenger side door.

All new motor homes under 10,000 lbs GVWR, which includes the ERA (B-Van), will have:

- 1.A "TIRE AND LOADING INFORMATION" label (See Figure 2) on the driver's door jamb.
- 2. A temporary OCCC label on the forward-most passenger side door.

Note: The temporary OCCC label must not be removed prior to the first retail sale.

If weight exceeding 45.4 kg (100 lbs) is added to any of our new motor homes (or B-Van) between final vehicle certification and first retail sale, the occupant and cargo capacity (OCCC) must be corrected. This can be done by either correcting the permanent OCCC label or adding a Cargo Carrying Capacity Modification label (see Figure 3).

The Certification Label lists important information about your unit. The Certification Label is permanently attached to the unit in the driver's door area and a copy is included in the InfoCase. See Figure 4 to learn more about the different parts of the Certification label.

Where to find the Certification Label:

1.InfoCase

- 2. Attached to the unit the certification label will be permanently attached in one of the following locations:
 - Front lower portion of the driver's door
 - Lower portion of the wall next to the driver's seat
 - Pillar in front of the driver's door



lbs

SEE OWNER'S

MANUAL FOR

ADDITIONAL INFORMATION

