

Periodic Maintenance Chart

Dealer & customer information

Item	Each Trip	Each Mo.	3 Mo.	6 Mo.	Each Year	As Req.	Procedure
Fiberglass Exterior		X		X			Wash with warm water and mild detergent Wax with Liquid or paste wax
Roof and Roof Components		X			X		Inspect and re-seal as needed Lubricate roof vent mechanism w/light oil & clean completely
Windows and Doors		X	X X		X X		Check vinyl seals when washing exterior Check seals for damage and repair as needed Lubricate door hinges & step components as needed Adjust & lubricate window latches w/powdered graphite or light oil Lube door locks & strike pocket, incl. Ext. storage & access doors
Seals and Adhesives		X					Inspect and re-seal as needed
LP Gas System					X	X	Check for leaks and road damage Have qualified service person check for leaks & adjust if needed
Water & Drainage	X	X			X	X	Check hoses, fittings and connections for leaks and signs of wear Check drainage system for leaks and road damage Sanitize system Winterize system depending on local seasonal conditions
Electrical System	X					X X	Check GFI circuits Perform maintenance on generator as outlined in generator manual Check and service batteries
Appliances	X	X X					Remove food and ice from refrigerator after each trip Clean fan blades and wash filter on range exhaust hood Check for obstructions and dirt on exterior appliances vents
Safety Equipment	X	X			X		Clean smoke detector Test smoke detector operation Check fire extinguisher pressure and condition
Carpeting	X					X	Vacuum after each trip Clean
Wood Surfaces		X					Clean pre-finished panels and wood
Seats						X X	Lubricate all mechanisms and inspect for proper operation Check all seat belt buckles, release mechanisms & belt webbing

Periodic Maintenance chart continued.

Chassis and Components						X	Follow chassis lubrication & maint. Procedures & schedules
Weight and Distribution	X						Be sure unit is within specified load limits & weight distribution
Axles (Towable)				X			Mounting bolts should be torqued to manufacturers specifications
Wheel bearings (Towable)					X	X	Repack wheel bearings yearly
Brakes (Towable)				X		X	Check operation and (or uneven wear)
Lug Nut Torque (Towable)	X						Lug Nuts should be torqued to manufacturer specifications
Tire Pressure	X						Tire pressure should be adjusted to match the specifications on the tire.