



MAINTENANCE CHART

ITEM	INTERVAL
Check tire pressure.	Before transporting.
Check lug nuts for tightness.	Before transporting.
Grease wheel bearings.	Semi-annually.
Grease wheel assemblies & hinge points.	Semi-annually.
Review safety instructions.	Annually.
Clean & paint.	As needed.
Sealing Roof	Annually

Glacier desires that you have full enjoyment of your new Glacier Ice House recreational vehicle. If for any reason your vehicle is out of service and cannot be used because of a manufacturing or chassis defect for a cumulative total of seven (7) days during the warranty period you are to immediately contact Glacier LLC by certified

mail, return receipt requested, setting forth the service problems and asking for immediate assistance, RV Warrior is willing and able to make every effort for a quick response.