

# RV CARE AND MAINTENANCE SCHEDULE

THIS IS A GENERAL GUIDELINE ONLY, CONTACT OUR SERVICE DEPARTMENT FOR MORE SPECIFIC INFORMATION

ITEM	EACH TRIP	1 MON	3 MON	6 MON	YEARLY	REQUIRED	PROCEDURES
Fiberglass exterior		X		X			<ul style="list-style-type: none"> <li>*Wash with warm water and mild detergent</li> <li>*Wax with liquid or paste wax</li> </ul>
Roof & Roof Components				X	X		<ul style="list-style-type: none"> <li>*Inspect and reseal as needed</li> <li>*Lubricate roof vent mechanism &amp; clean completely</li> </ul>
Windows & Doors		X	X		X		<ul style="list-style-type: none"> <li>*Check Vinyl seals when washing exterior</li> <li>*Check seals for damage &amp; repair as needed</li> <li>*Lubricate door hinges and step components</li> <li>*Adjust and lubricate window latches</li> <li>*Lube door locks, strike plates, exterior storage &amp; access doors</li> </ul>
Seals & Adhesives		X					<ul style="list-style-type: none"> <li>*Inspect and reseal as necessary</li> </ul>
LP Gas Systems					X		<ul style="list-style-type: none"> <li>*Check for leaks and road damage</li> <li>*Have qualified service technician check pressure and complete system</li> </ul>
Water & drainage	X	X			X	X	<ul style="list-style-type: none"> <li>*Check hoses, fittings, connections for leaks &amp; signs of wear</li> <li>*Check drainage system for leaks &amp; road damage</li> <li>*Sanitize System</li> <li>*Winterize system depending on local seasonal conditions.</li> </ul>
Electrical System	X					X	<ul style="list-style-type: none"> <li>*Check GFCI circuits</li> <li>*Check &amp; service batteries</li> <li>*Perform maintenance on generator as outlined in generator manual</li> </ul>
Appliances	X	X			X		<ul style="list-style-type: none"> <li>*Remove food &amp; ice from refrigerator after each trip</li> <li>*Clean fan blades &amp; wash filter on range exhaust hood</li> <li>*Check for obstructions &amp; dirt on exterior appliance vents</li> </ul>
Safety Equipment	X	X			X	X	<ul style="list-style-type: none"> <li>*Clean smoke detector components &amp; check operation</li> <li>*Check carbon monoxide/LP gas detector</li> <li>*Check fire extinguisher</li> </ul>
Weight & Distribution	X						<ul style="list-style-type: none"> <li>*Be sure that the unit is within specified local limits &amp; distribution</li> </ul>
Brakes & Axle				X		X	<ul style="list-style-type: none"> <li>*Check operation &amp; uneven wear</li> <li>*Axle mounting bolts should be torqued to 145-155 pounds</li> </ul>
Wheel bearings					X	X	<ul style="list-style-type: none"> <li>*Repack wheel bearings yearly</li> </ul>