



*Coach House*

**PLATINUM II**®

# Section 3

## Electrical Systems

Mercedes-Benz








**3500 SPRINTER CHASSIS**

Rev: 021619



# Electrical Systems

Special Electrical Statement	.....	3-5
Firefly Control System	.....	3-7
Firefly Instruction Manual	.....	3-9
Power Converter	.....	3-11
Progressive Dynamics Instruction Manual	.....	3-13
Circuit Breakers and Fuses	.....	3-17
Main Fuse Panel Diagram	.....	3-18
Auxiliary Fuse Panel Diagram	.....	3-19
Mercedes Benz Battery Separator	.....	3-21
Generator	.....	3-23
Cummins/Onan Generator Manual	.....	3-25
Auxiliary "House" Batteries	.....	3-27
Maintenance of Batteries	.....	3-29
80 Amp Breaker	.....	3-33
150 Amp Breaker	.....	3-35
Power Inverter	.....	3-39
Auxiliary Start Over Ride Switch	.....	3-43
GFCI Receptacles	.....	3-45
Wiring Diagrams		
 Main Control Panel	.....	3-47
 EL 108 (All Mercedes Benz Chassis)	.....	3-49
 CH-R-2425 Battery Separator	.....	3-51
 Driver's Side Pedestal	.....	3-53
 Passenger's Side Pedestal	.....	3-55



# Special Electrical Statement

Coach House Platinum II Motorhomes are wired with a Master Disconnect Switch. The location and operation of this switch is detailed on page 3-33 of this manual.

Coach House, Inc. recommends  
that the Master Disconnect Switch  
be turned to the “ON” position  
any time your motorhome is in use.  
Vital systems including LPG and  
Carbon Monoxide detectors will not  
function unless the  
Master Disconnect Switch  
is turned “ON”



# Firefly Control System

Your Coach House **PLATINUM II** model is equipped with the “Firefly” control system.

This system uses a touchscreen home base to operate many of the electrical components in your motorhome.



The touchscreed pad is located above the sofa behind the driver's seat in the upper cabinet panel.





**Insert Firely Manual (3 Hole Punch)  
Here**



# Power Converter

Your Coach House **PLATINUM II** is equipped with a power converter that supplies the motorhome with 110 volts AC (Alternating Current) and 12 volts DC (Direct Current). The source of power can be from the:


- 1) Auxiliary "House" 12 volt batteries
- 2) 110 volt external power cord (Shore Power)
- 3) Generator

## Power Converter Location:

<u>MODEL #</u>	<u>Location</u>
240 (Rear Bed)	Under the Pantry
240 (Rear Sofa)	Under the Pantry
240 (Rear Bath/Twin Bed)	Passenger Side Under Twin Bed
240 (Mid Bath/Twin Bed)	Driver's Side Under Twin Bed
241 XL (Rear Bed)	Under the Pantry
241 XL (Rear Sofa)	Under the Pantry
241 XL (Rear Bath/Twin Bed)	Passenger Side Under Twin Bed
241 XL (Queen Bed)	Foot of the Bed Pedestal
241 XL (Mid Bath/Twin Bed)	Driver's Side Under Twin Bed
241 XL (Murphy Bed)	Under the Wardrobe



The converter is equipped with an automatic switchover relay to prevent both the generator and the external power cord from being connected to the converter at the same time. When either the external power cord or the generator is being used, both the 110 volt AC system and the 12 volt DC system will be activated inside the motorhome. When neither of these is connected, the 12 volt auxiliary batteries will activate only the 12 volt DC system.

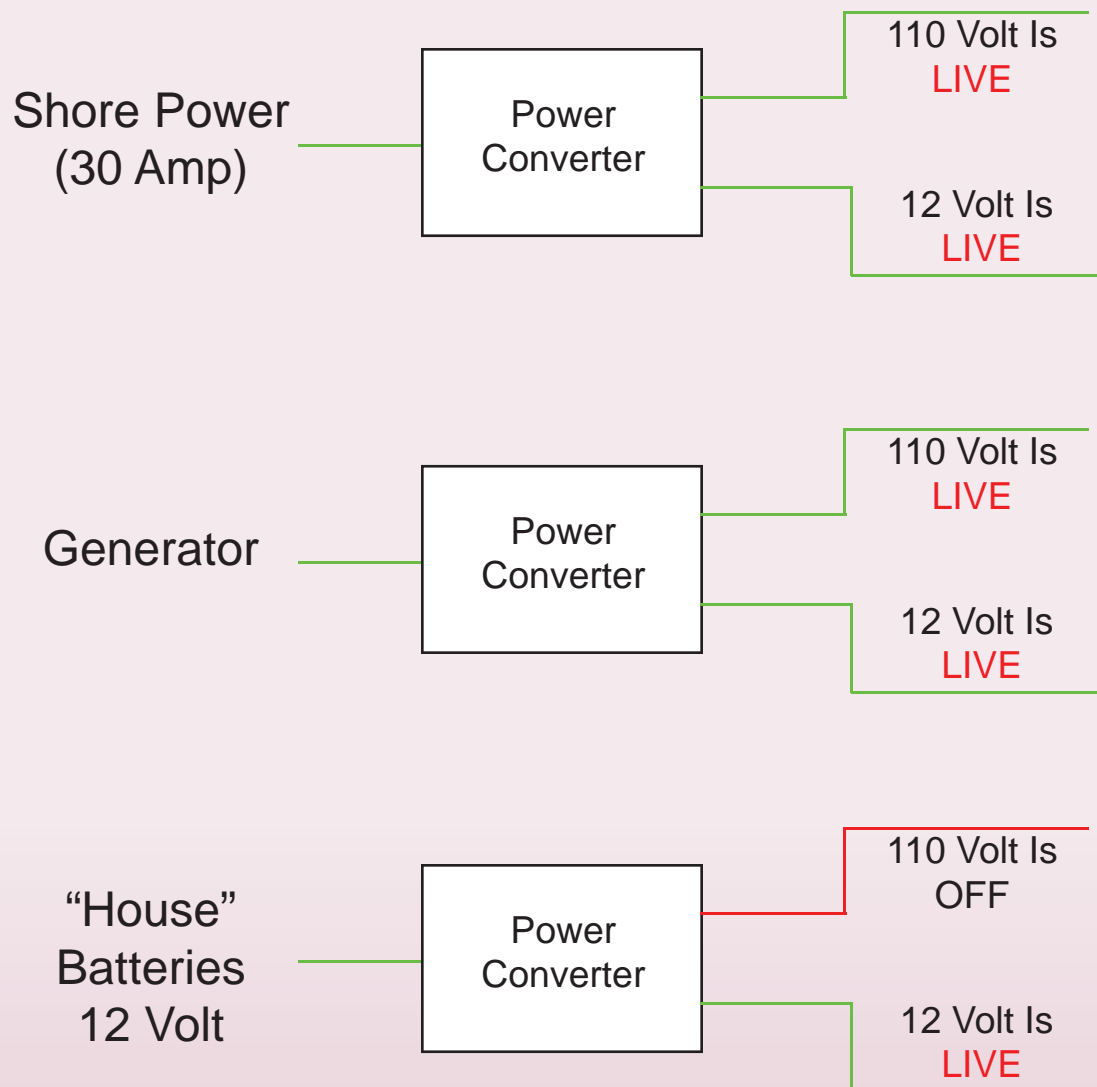



*Coach House*

**PLATINUM II**®

**Progressive Dynamics**  
**Power Converter**

**Instruction Manual**



# Insert Progressive Dynamics Manual Here





# Circuit Breaker & Fuses

The location of the power converter can be found by looking for a black plastic box approximately 6" high x 12" wide. Location of the converter for your model is listed on page 3-7.

The door can be opened with a "push" touch and the circuit breakers and fuses can be located. The 110 volt AC breakers are located on the right with the first breaker on the left being the MAIN POWER, and the remaining breakers for the circuits as labeled on the door. The 12 volt DC fuses are the automotive push in type links and are located on the left side. The top two breakers are for system use, and do not feed the motorhome. The 12 volt DC circuits are labeled on the door.

There is an auxiliary 12 volt fuse panel located above the driver's side seat in a compartment behind a smoked plexiglass door.

Diagrams of the Fuse Panels for your model are located on the next page.

## CAUTION

Whenever working on the electrical system, the system or circuit being worked on should be deactivated by disconnecting the power and/or throwing the main circuit breaker and safe procedures should be followed to prevent electrical shock. Any modifications made to the system should only be done by a professional to assure compliance with the codes and to assure safe installation practices.

# Main Fuse Panel



Mercedes-Benz

## Mercedes Benz (Platinum II)

### 110 Volt System Breakers

<u>30</u>	<u>20</u>	<u>15</u>	<u>20</u>	<u>15</u>	<u>20</u>	<u>15</u>	<u>15</u>
Amp	Amp	Amp	Amp	Amp	Amp	Amp	Amp

Main Power

Microwave

Auto Start Generator

Power Inverter

Converter Box (12 Volt)

Air Conditioner

Refrigerator

Blank

### 12 Volt System Fuses

30  
System Use

30  
System Use

<u>30</u>	<u>Refrigerator</u>
<u>30</u>	<u>Sofa</u>
<u>10</u>	<u>Water Pump</u>
<u>20</u>	<u>Lights and Fans</u>
<u>10</u>	<u>Water Heater</u>
<u>15</u>	<u>Furnace</u>
<u>10</u>	<u>T.V.</u>
<u>20</u>	<u>Accessories and Tank Heaters</u>
<u>10</u>	<u>Air Conditioner Circuit Board</u>
<u>3</u>	<u>L.P. Common</u>
	<u>Blank</u>
	<u>Blank</u>

# Auxiliary Fuse Panel (Above Driver's Seat)

<u>Circuit</u>	<u>Amp</u>	<u>Device</u>
1	10A	Motorized Awning
2	5A	T.V. Wall Plate
3		Blank
4	7.5A	Satellite (Optional)
5		Blank
6	10A	CO and LP Detectors

## Fuses in Drivers Seat Base (Platinum II)

<u>Circuit #</u>		
	6	16
		23
		26
<u>Circuit</u>	<u>Amps</u>	<u>Device</u>
6	5	Step Ignition
16	20	Power for Step
23	15	Hydraulic Pump (Slide Out)
26	20	Power for Emergency Start Solenoid



# Mercedes Benz Battery Seperator



Mercedes Benz Sprinter Models have a factory installed battery seperator. Please refer to the Mercedes Benz Manual for information about the charging systems on the Sprinter Chassis.



# Generator



Mercedes Benz Chassis models are equipped with a:



3.6 kW ONAN LPG (Propane) Microquiet Generator

Your LP Gas Tank should only be filled by a qualified Propane Salesperson. Injury or death could occur if safety precautions are not followed.

---

The instruction manual supplied with the generator should be carefully reviewed. Care should be taken not to exceed the capacity of the generator to prevent any possible damage to the generator unit.





# Insert Cummins Generator Manual Here



# Auxiliary “House” Batteries



Auxiliary batteries are located under the hood on the driver's side of the engine compartment.



“Lifeline” GPL-4CT

Two - 6 Volt Batteries Wired in Series

Rated 242 Amp Hours



The auxiliary batteries are charged either by:

- 1) The *Alternator* of the motor home while driving
- 2) The *Power Converter* when external 120 Volt AC power is connected
- 3) The *Generator*

Care should be taken to prevent the auxiliary batteries from being totally discharged by making sure that all of the lights, fans, and appliances are turned off when the motor home is not in use. Whenever the motor home is not used for a period of time, the 120 Volt power cord should be plugged in once a month for 8 to 12 hours to bring up the charge on the auxiliary batteries. The master 12 Volt electrical switch (found to the right immediately upon entering the main motor home door) must be ON for the converter charger to charge the auxiliary batteries. Refer to the power center instruction sheet for further information. A totally discharged battery will not normally recharge as quickly, or in the same manner as a low battery. Professional help should be used when attempting to charge a totally discharged battery.

The engine battery of the motor home is not charged from the power converter. The engine battery should be periodically checked and maintained. Refer to the Chassis Owners Manual for recommended engine battery maintenance.

# Maintenance of Batteries

Batteries have a “life” which is determined by the number of charging/discharging “cycles”. When your system is not in use, proper care should be taken to extend the battery life by following simple procedures:

## **Short Term Storage:**

- 1) Turn off the Interior Battery Switch (located inside the Motorhome Entry Door to the right).
- 2) Ensure that all current drains have been eliminated. (Turn off all appliances)

## **Long Term Storage:**

- 1) Turn off the Interior Battery Switch (located inside the Motorhome Entry Door to the right).
- 2) Disconnect the “House” Batteries by removing the Main “Positive” cable.



**Note:** The house battery (ies) are located under the engine hood on the driver’s side.

- 3) Connect a Battery Maintenance Device (Charging System) to your “House” Battery Bank. Chargers and Maintenance Devices are readily available at Auto Parts Stores, RV Dealers, or your local Hardware Store.

## **Engine Battery Maintenance:**

Please refer to your Chassis Owner’s Manual to correctly maintain your engine battery.



**Insert Battery Maintenance Manual in  
See Through Pocket Here**





# 80 Amp Breaker

Your Coach House **PLATINUM II** has an electrical system circuit breaker to prevent damage to the 12 volt electrical system. The 80 Amp breaker will 'trip' if an overload situation occurs. Push in the red button to reset the breaker.

## 80 Amp Breaker Locations

<u>Model #</u>	<u>Location</u>
240	Under the Driver's Seat
241 XL	Under the Driver's Seat





# 150 Amp Breaker

Your Coach House **PLATINUM II** has an electrical system circuit breaker to prevent damage to the engine when using the Emergency Start Switch. The 150 Amp breaker will 'trip' if an overload situation occurs. Push in the red button to reset the breaker.

## 150 Amp Breaker Locations

<u>Model #</u>	<u>Location</u>
240	Under the Passenger's Seat (FRONT)
241 XL	Under the Passenger's Seat (FRONT)






# Master Disconnect Switch

The battery switch is located at the exterior side door, on the cabinet behind the passenger's seat. Auxiliary batteries are being used when the switch is in the on position. Always turn the battery switch to the off position when the motor home is not being used, to prevent the auxiliary batteries from being drained.

NOTE: Auxiliary batteries will NOT charge from engine alternator or converter with battery switch in the "OFF" position.

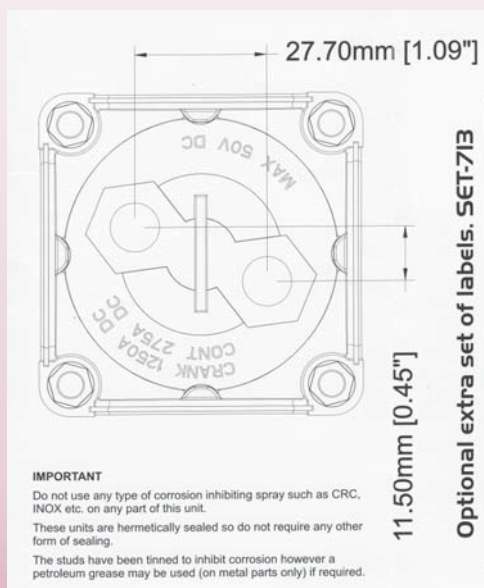





# Power Inverter

The Xantrex 1200 Watt Freedom X Pure Sine Wave Inverter has been installed in your Coach House **PLATINUM** motorhome as standard equipment. The status panel for the inverter is located next to the 12 volt converter box (usually under the bed platform).



The inverter will supply 110 volt power to the electronic components (Television, DVD player, optional satellite receivers and the electrical outlets when you are not hooked up to shore power or running the generator. These devices will drain your “house” batteries if in use for an extended period of time.







# Specifications

**NOTE:** Specifications are subject to change without prior notice.

Physical Specifications	Freedom X
L × W × H	14.8" (376mm) × 10.4" (263mm) × 3.5" (91mm)
Net Weight	10.4 lbs (4.7 kg)

Environmental Specifications	Freedom X
Ambient Temperature: Operating Temperature Range Storage Temperature Range	-4 –122 °F (-20 –50 °C), with output derated above 77 °F (25 °C) -40 –158 °F (-40 –70 °C)
Humidity: Operation/Storage	5–95% RH, non-condensing

System Specifications	Freedom X
Transfer relay rating	30A surge, 24A continuous
Transfer time (shore to inverter)	<20 milliseconds <sup>a</sup>
Transfer time (inverter to shore)	<20 milliseconds with a 20-second delay
Transfer voltage (shore to inverter)	<95 V and >135 V
Transfer voltage (inverter to shore)	<130 V and >100 V
Cooling	Fan, activated by any of the following: •High internal temperature •High AC output power

DC Input	Freedom X
Operating voltage range	LBCO voltage <sup>a</sup> –16.5 VDC
Safe non-operating voltage range	0–24 VDC
Nominal voltage	12.0 VDC
Nominal current at full load	116 ADC

AC Output	Freedom X
Output voltage range	110–125 VAC
Continuous power	1200 W @ 25 °C
Continuous current	10.0 A
Surge power	2400 W
Frequency	60 (or 50) Hz <sup>b</sup>
GFCI protection	customer-provided <sup>c</sup>
Wave shape	True Sine Wave
Peak efficiency	91%
Full load efficiency	≥ 86%

Regulatory Approvals	Freedom X
EMC and Safety	ETL listed to CSA 107.1 UL458 and UL458 Marine Supplement (drip shield with product number 808-1050 required) ABYC E11, A20, A25, A31
EMI	FCC Class B

a. To set LBCO, see "To change the Low Battery Cutout (LBCO) voltage:" on page 42.

b. To set the AC Frequency, see "To change the AC Output Frequency:" on page 45.

c. See "Ground Fault Circuit Interrupters (GFCIs)" on page 14 for approved devices.



# Auxilliary Start Over-Ride Switch

In the event that your engine battery does not have the power to start your motorhome, your **PLATINUM II** is equipped with an Auxilliary Start Over-Ride Switch which will “tie” the house batteries to the engine battery to give an extra “boost” of power to start your motorhome engine.

**Push the red switch and HOLD IT DOWN while starting your vehicle with the key.**

The Over-Ride Switch is located under the Driver's Seat next to the 80-Amp Breaker.





# GFCI Receptacles

A GFCI receptacle is different from conventional receptacles. In the event of a ground fault, a GFCI will trip and quickly stop the flow of electricity to prevent serious injury. All Coach House **PLATINUM** models have GFCI receptacles in the galley and the bathroom. See the GFCI manual for more information.



## How to test your GFCI Outlet:

**Step 1:** Plug a lamp into the GFCI.


**Step 2:** Turn on the lamp.

**Step 3:** Push the TEST button on the GFCI. The GFCI should trip, stopping the flow of electricity to the lamp. Note that the RESET button will pop-out.



**If the lamp DOESN'T turn off when the TEST button is pushed,** the GFCI is not working properly and should be replaced immediately.

**If the lamp DOES turn off when the TEST button is pushed,** the GFCI is working properly and should be tested monthly. To restore power, press the RESET button.

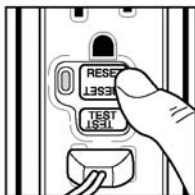

**If the power is not restored when the RESET button is pushed,** the GFCI is not working properly and should be replaced immediately.

For more information on GFCIs and how to test monthly, go to  
**[www.tools.passandseymour.com/gfci](http://www.tools.passandseymour.com/gfci)**  
or to participate in an interactive GFCI demo online, go to  
**[www.electrical-safety.org](http://www.electrical-safety.org)**


## What is a GFCI Outlet?

A Ground Fault Circuit Interrupter (GFCI) Outlet protects you from serious injury due to electrical shock from:

- Hazardous leakage levels from appliances and tools
- Exposure to moisture while operating electrical equipment
- Frayed or damaged electrical wiring

## Where are your GFCIs located?

GFCI protection is required per the *National Electrical Code®* (NEC) for outlets servicing bathrooms, kitchen countertops, unfinished basements, garages, utility sinks, and outdoor locations.


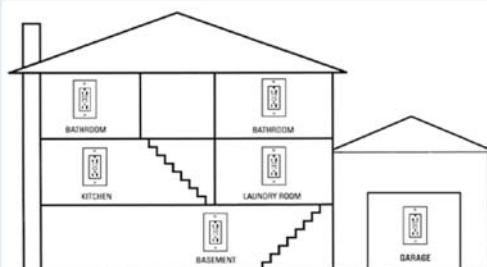


Legrand/Pass & Seymour  
is a proud sponsor of:





# Main Control Panel Wiring Diagrams

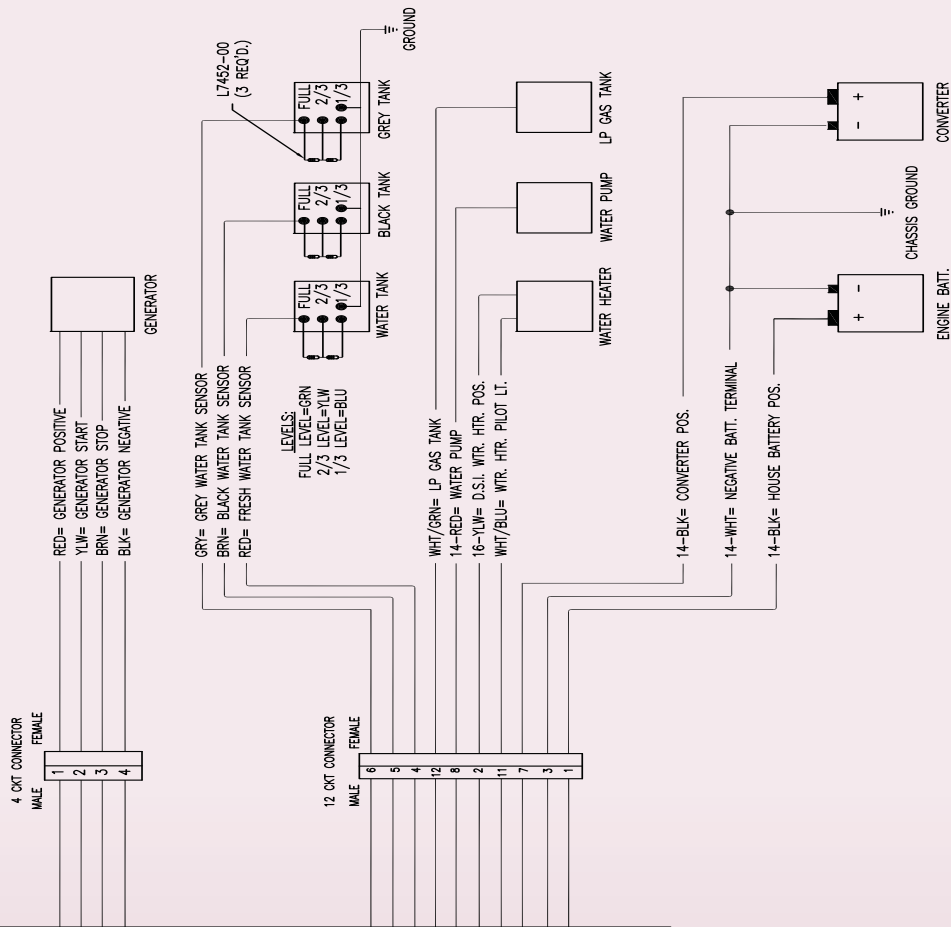
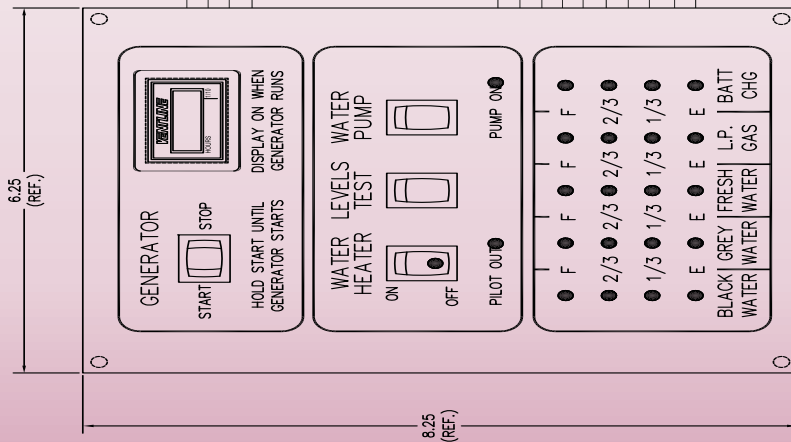


- NOTES:
1. UNLESS OTHERWISE SPECIFIED ALL WIRE IS 22 AWG.
  2. REF. DWG'S:  
GENERATOR HARNESS= L7751-00  
INTERNAL & SWITCH HARNESS= L7880-00  
PIGTAIL HARNESS= L7881-00  
GEN. PIGTAIL HARNESS= L7882-00  
PCB= L5118-01  
TRH= L7452-00 (3 EA.)  
TEST HARNESS= L7883-00
  3. BEFORE PACKING, SECURE HARNESS WITH VDU/69-00 TIE WRAP ON RIGHT SIDE POST.

PART NO.	RECD	MATERIAL	DESCRIPTION	ING. NO.
1				
2				
3				
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				
26				
27				
28				
29				
30				
31				
32				
33				
34				
35				
36				
37				
38				
39				
40				
41				
42				
43				
44				
45				
46				
47				
48				
49				
50				
51				
52				
53				
54				
55				
56				
57				
58				
59				
60				
61				
62				
63				
64				
65				
66				
67				
68				
69				
70				
71				
72				
73				
74				
75				
76				
77				
78				
79				
80				
81				
82				
83				
84				
85				
86				
87				
88				
89				
90				
91				
92				
93				
94				
95				
96				
97				
98				
99				
100				


ENGLISH TOLERANCE UNLESS SPECIFIED  
 0 PL-1400  
 2 PL-1400  
 3 PL-1400  
 4 PL-1400  
 5 PL-1400  
 6 PL-1400  
 7 PL-1400  
 8 PL-1400  
 9 PL-1400  
 10 PL-1400  
 11 PL-1400  
 12 PL-1400  
 13 PL-1400  
 14 PL-1400  
 15 PL-1400  
 16 PL-1400  
 17 PL-1400  
 18 PL-1400  
 19 PL-1400  
 20 PL-1400  
 21 PL-1400  
 22 PL-1400  
 23 PL-1400  
 24 PL-1400  
 25 PL-1400  
 26 PL-1400  
 27 PL-1400  
 28 PL-1400  
 29 PL-1400  
 30 PL-1400  
 31 PL-1400  
 32 PL-1400  
 33 PL-1400  
 34 PL-1400  
 35 PL-1400  
 36 PL-1400  
 37 PL-1400  
 38 PL-1400  
 39 PL-1400  
 40 PL-1400  
 41 PL-1400  
 42 PL-1400  
 43 PL-1400  
 44 PL-1400  
 45 PL-1400  
 46 PL-1400  
 47 PL-1400  
 48 PL-1400  
 49 PL-1400  
 50 PL-1400  
 51 PL-1400  
 52 PL-1400  
 53 PL-1400  
 54 PL-1400  
 55 PL-1400  
 56 PL-1400  
 57 PL-1400  
 58 PL-1400  
 59 PL-1400  
 60 PL-1400  
 61 PL-1400  
 62 PL-1400  
 63 PL-1400  
 64 PL-1400  
 65 PL-1400  
 66 PL-1400  
 67 PL-1400  
 68 PL-1400  
 69 PL-1400  
 70 PL-1400  
 71 PL-1400  
 72 PL-1400  
 73 PL-1400  
 74 PL-1400  
 75 PL-1400  
 76 PL-1400  
 77 PL-1400  
 78 PL-1400  
 79 PL-1400  
 80 PL-1400  
 81 PL-1400  
 82 PL-1400  
 83 PL-1400  
 84 PL-1400  
 85 PL-1400  
 86 PL-1400  
 87 PL-1400  
 88 PL-1400  
 89 PL-1400  
 90 PL-1400  
 91 PL-1400  
 92 PL-1400  
 93 PL-1400  
 94 PL-1400  
 95 PL-1400  
 96 PL-1400  
 97 PL-1400  
 98 PL-1400  
 99 PL-1400  
 100 PL-1400



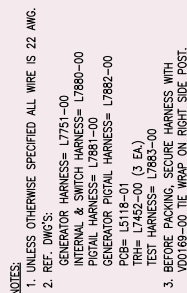


ENGLISH (TOLERANCE UNLESS SPECIFIED)  
 0 PL.±.040 1 PL.±.005  
 2 PL.±.010 3 PL.±.005  
 FRACTIONS +1/64

ALL MERCEDES MODELS EXCEPT VAN (2-12 TO PRESENT)

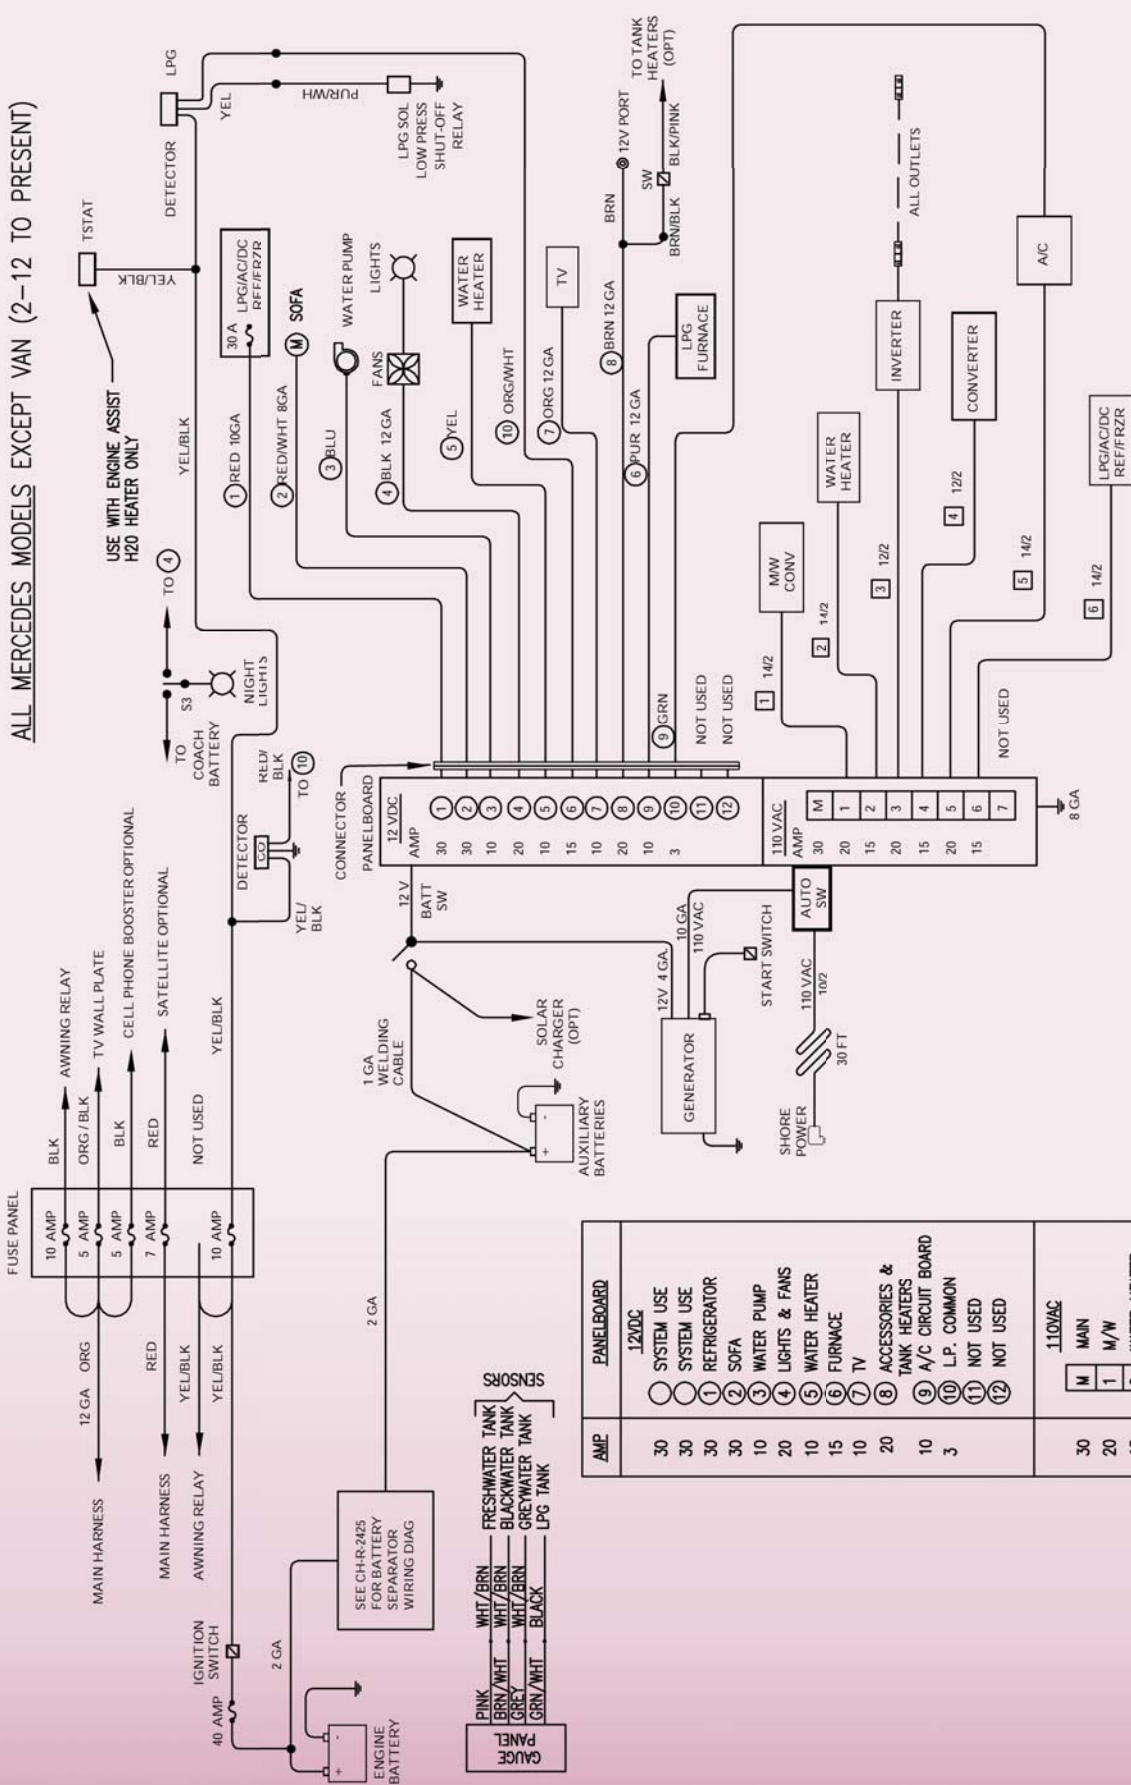

1647	23	1-24-17	UPDATE FUSE BLOCK FOR AWNING RELAY.
ECR	REV	DATE	DESCRIPTION
PLATINUM II 110VAC & 12VDC WIRING DIAGRAM			Coach House Motor Homes
			No. EL108

NOTE:  
 1. SOME ITEMS SHOWN ARE OPTIONAL.  
 2. WIRING 14 GA UNLESS SPECIFIED.  
 3. SEE CH-R-2448 FOR AWNING RELAY.

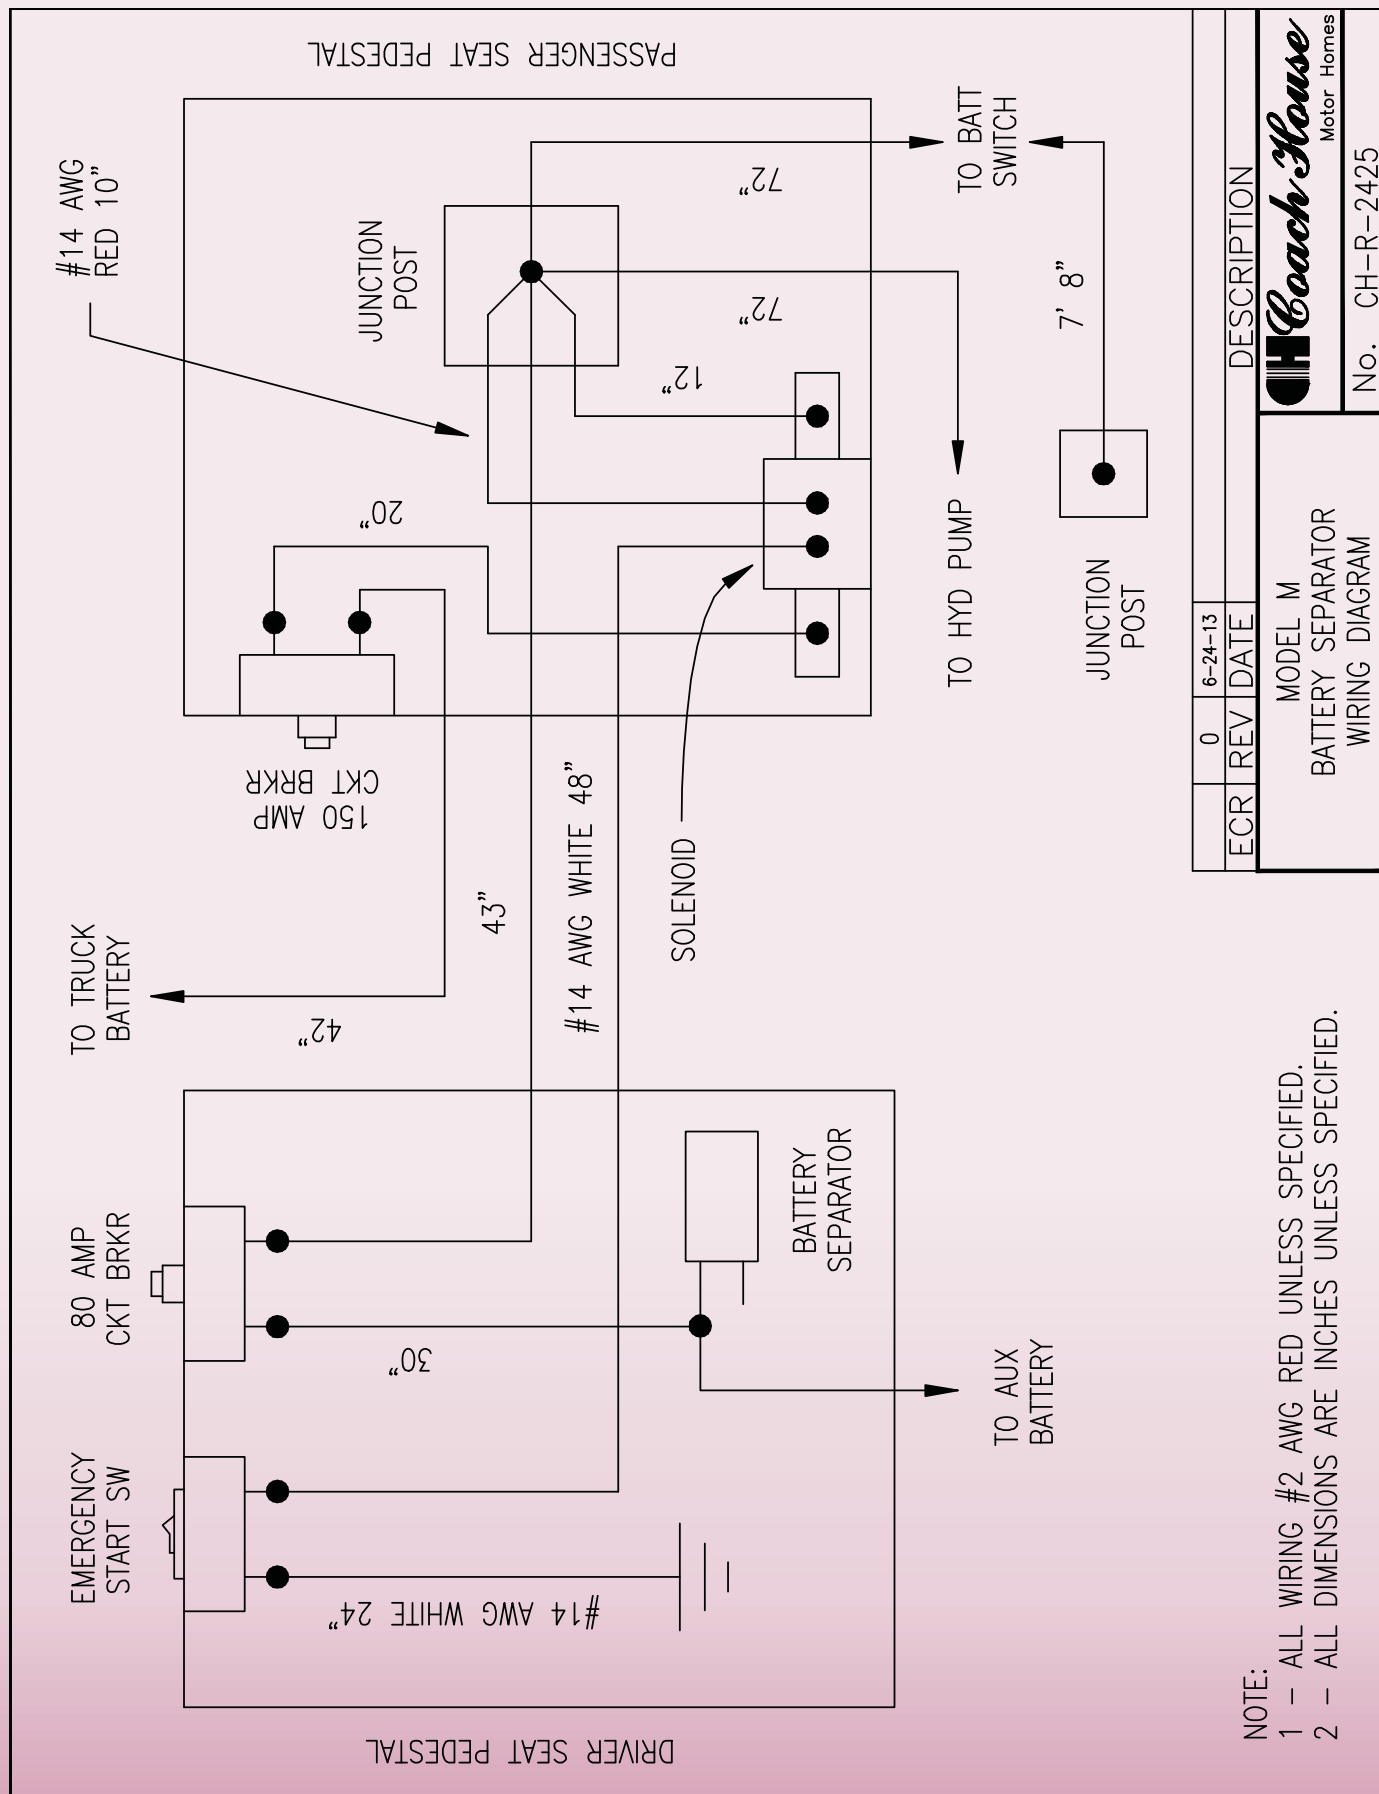

NOTE:

- 1 - ALL WIRING #2 AWG RED UNLESS SPECIFIED.
- 2 - ALL DIMENSIONS ARE INCHES UNLESS SPECIFIED.

ECR	REV	DATE	DESCRIPTION
0	6-24-13		

MODEL M BATTERY SEPARATOR WIRING DIAGRAM	
No. CH-R-2425	



# Driver's Seat Pedestal Wiring


Auxilliary Start Switch



80 Amp Breaker



Drivers Door

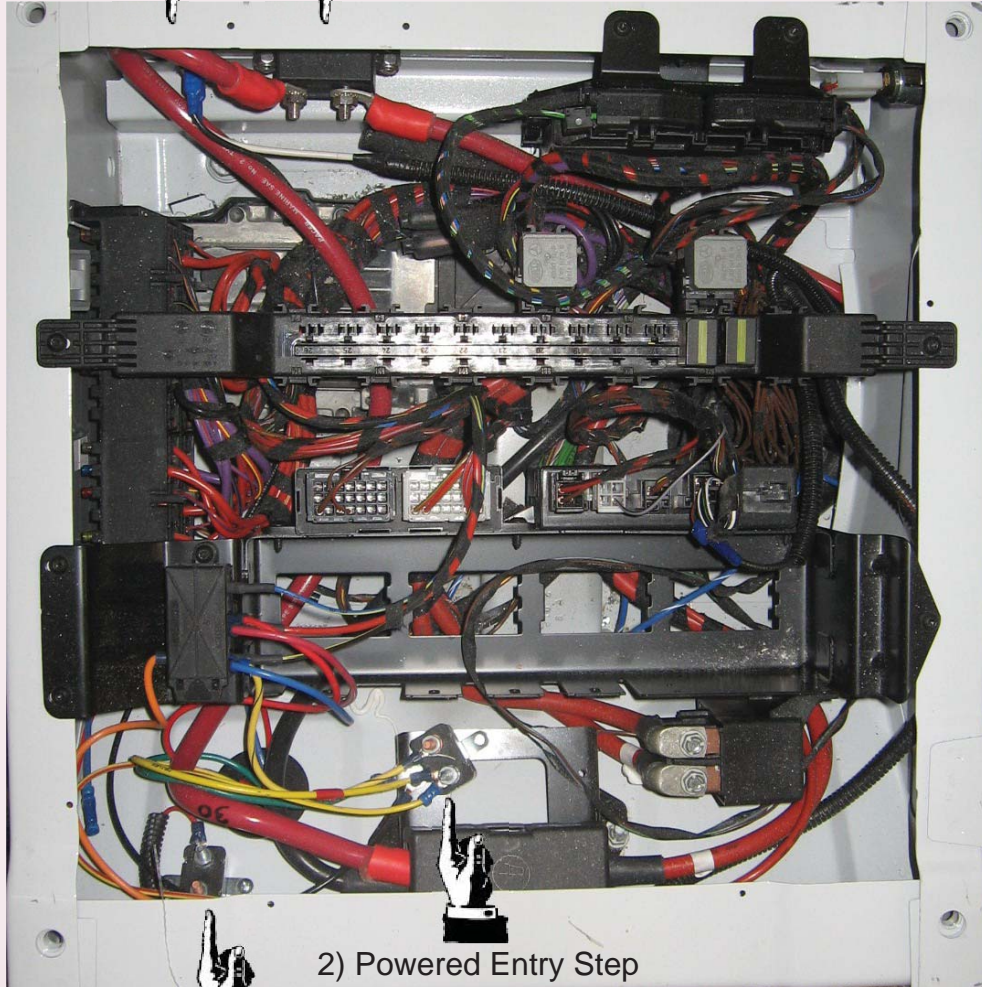

1) Hydraulics



2) Powered Entry Step

Coach House has tied into the Mercedes Benz Chassis Electrical System in two places under the Driver's Seat (In the Pedestal) There are 2 Circuit Breakers which power the:

- 1) H.W.H. (Hydraulics - Ignition Circuit) (15 Amp Breaker)
- 2) Powered Entry Step - Ignition Circuit (15 Amp Breaker)


These circuit breakers are automatic resetable, and will re-activate the circuit when the load goes back to normal.





# Passenger Seat Pedestal Wiring

Passenger's Door 1

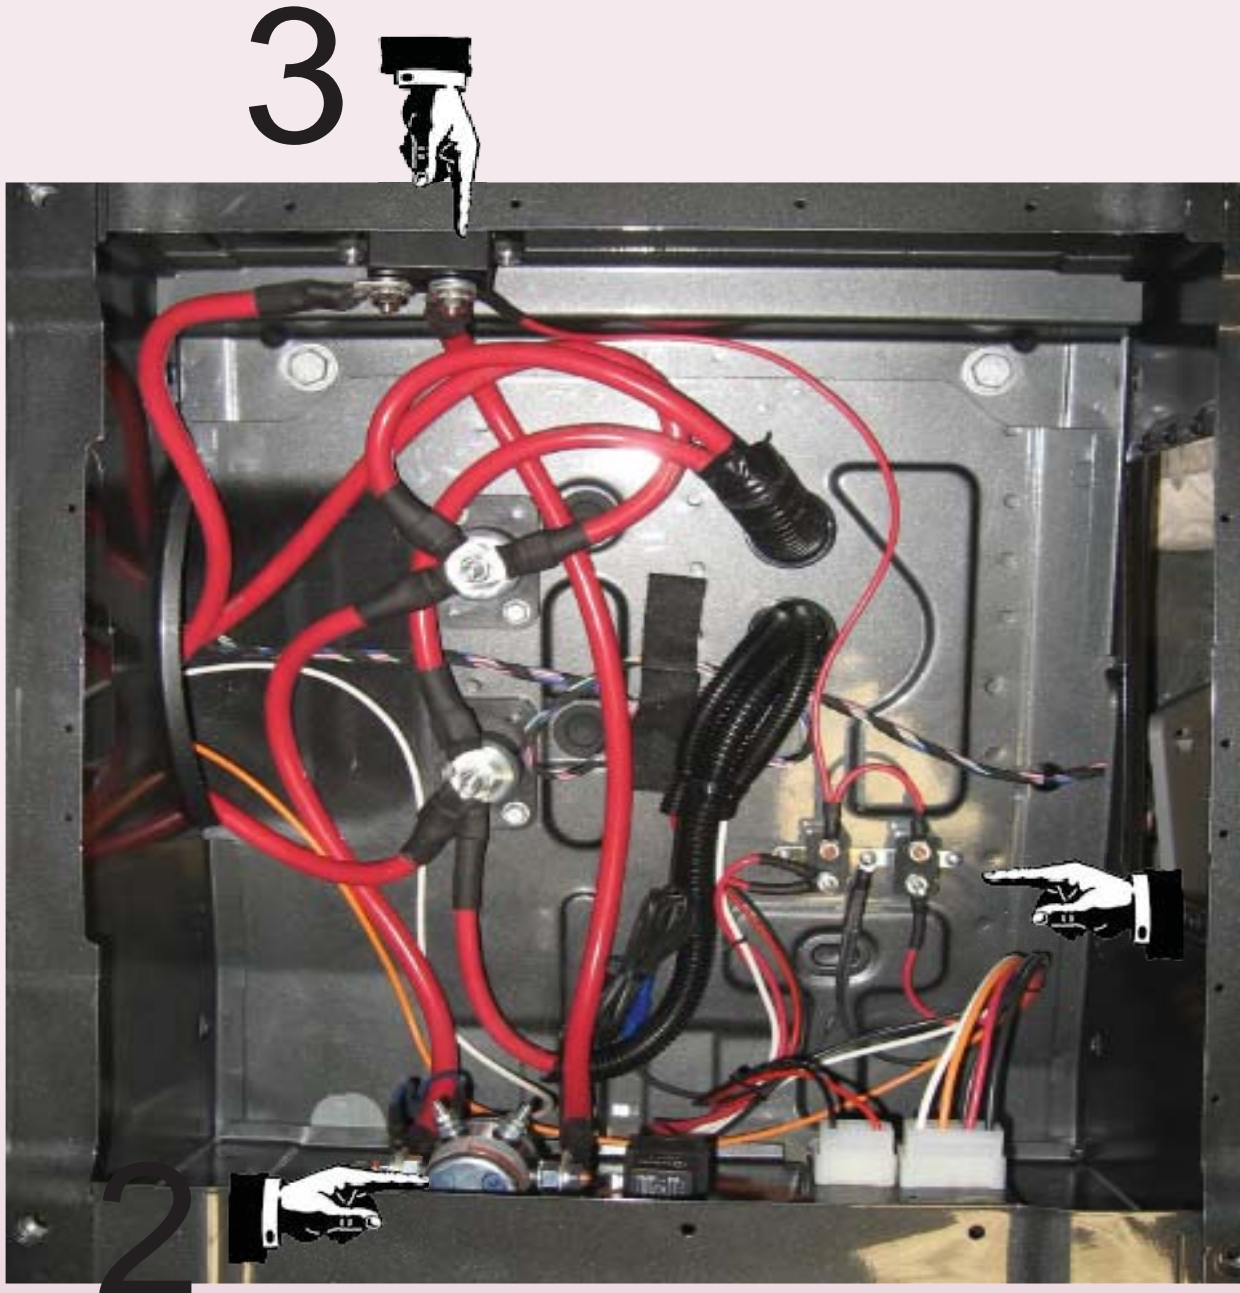

The following electrical items are installed under the Passenger's Seat (In the Pedestal)  
They are:

- 1) Resettable Breakers for the Powered Entry Step (15 Amp / 6 Amp)
- 2) Emergency Start Solenoid
- 3) 150 Amp Breaker (Emergency Start Circuit)